

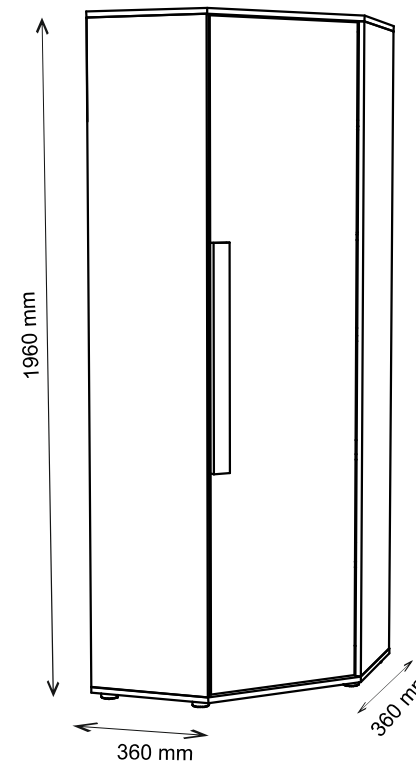
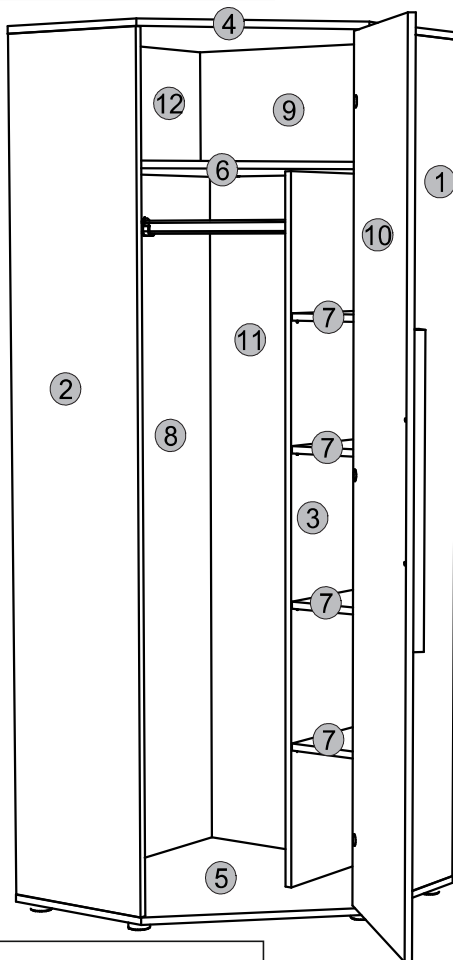
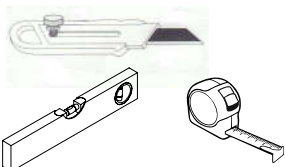





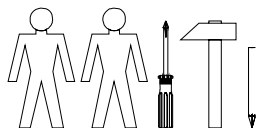


Instalation manual


ALEX: Wardrobe corner

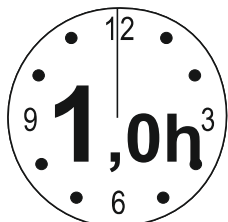


Element symbol	Dimensions				Code	Package
	1	2	3	4		
1	1908	355	16	1	A - 124	1/1
2	1908	355	16	1	A - 125	1/1
3	1612	300	16	1	A - 126	1/1
4	710	710	16	1	A - 213	2/2
5	710	710	16	1	A - 214	2/2
6	693	693	16	1	A - 310	2/2
7	297	225	16	4	A - 311	2/2
8	1612	693	16	1	A - 403	2/2
9	280	693	16	1	A - 404	2/2
10	1902	470	16	1	A - 019	3/3
11	1630	695	3	1	A - 617	2/2
12	298	695	3	1	A - 618	2/2

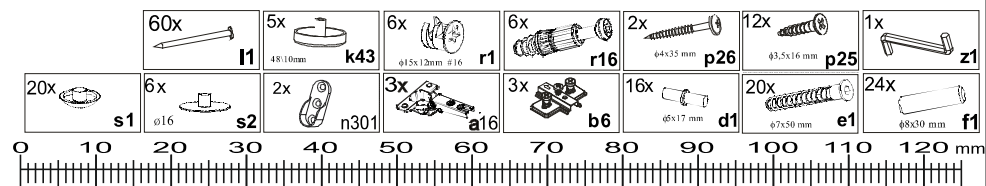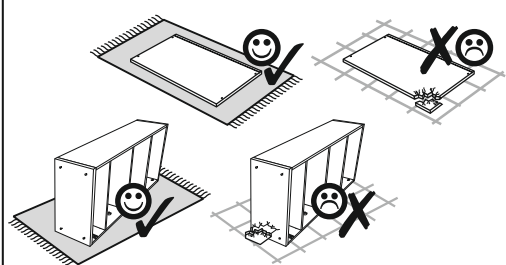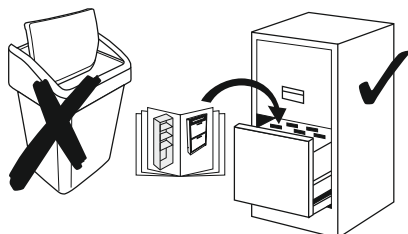


1

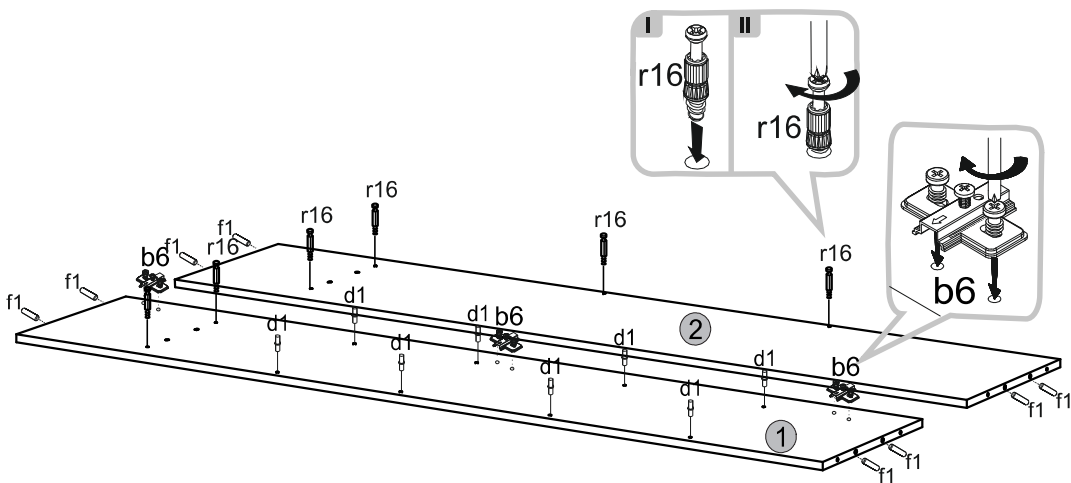


2




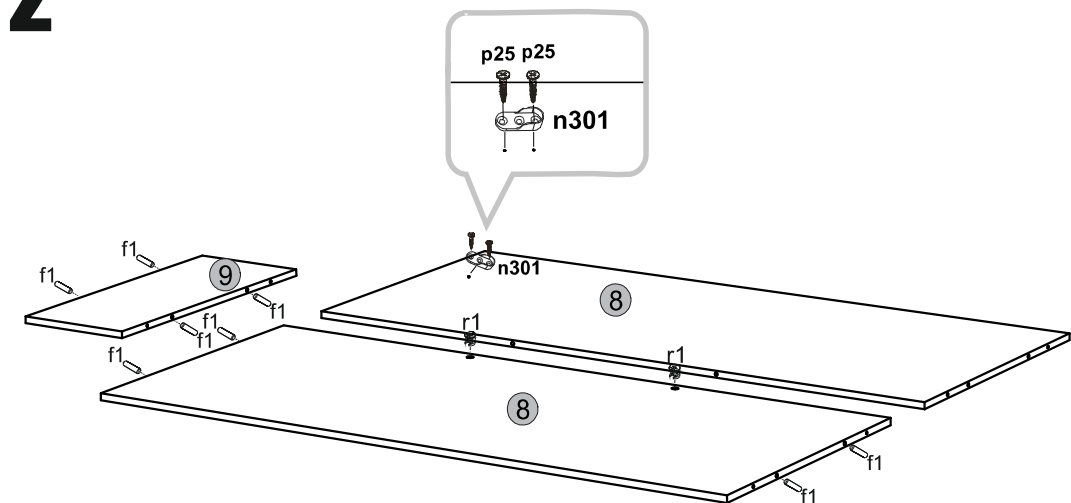


3

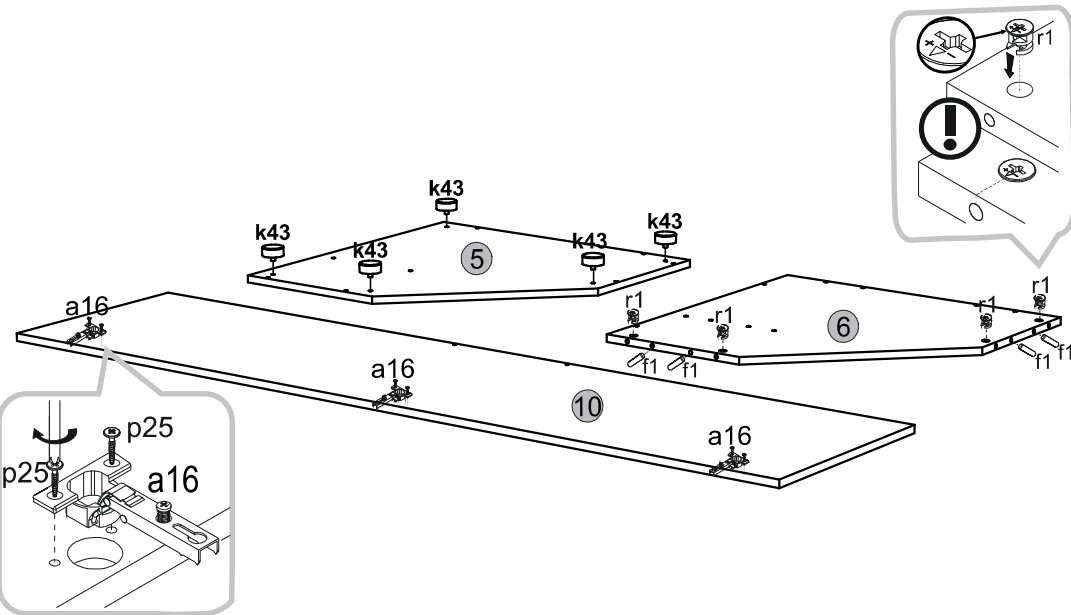


4

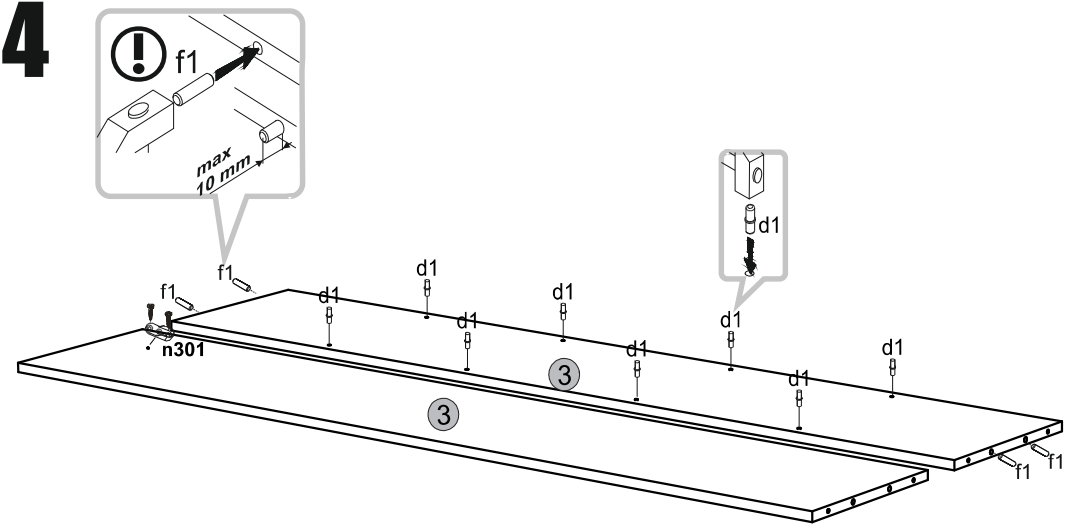


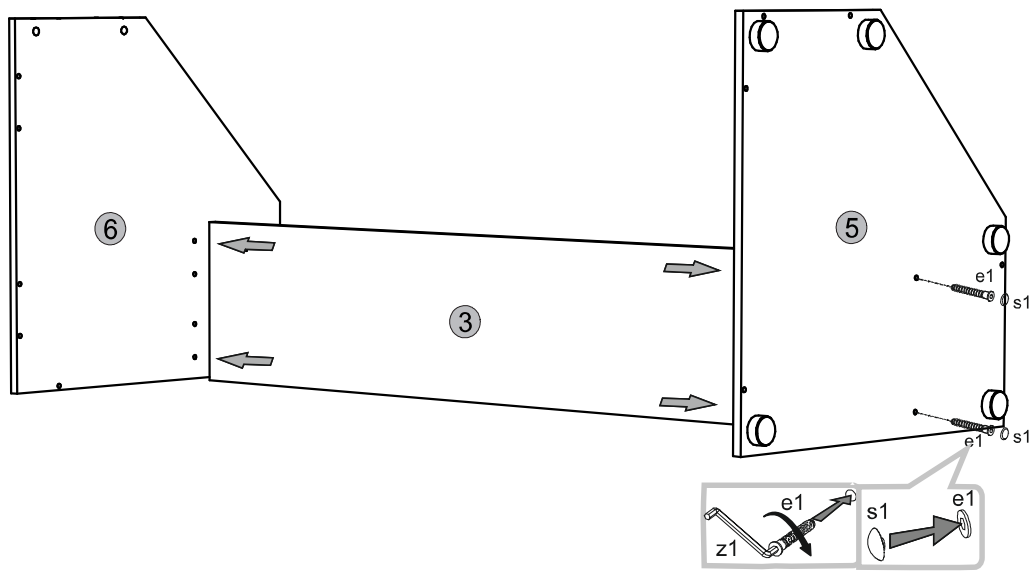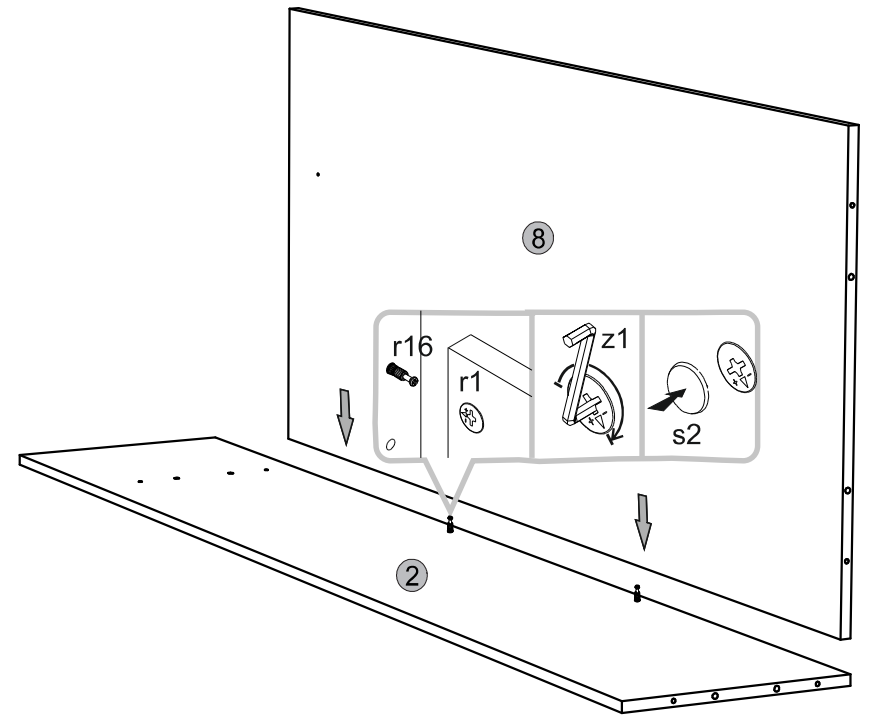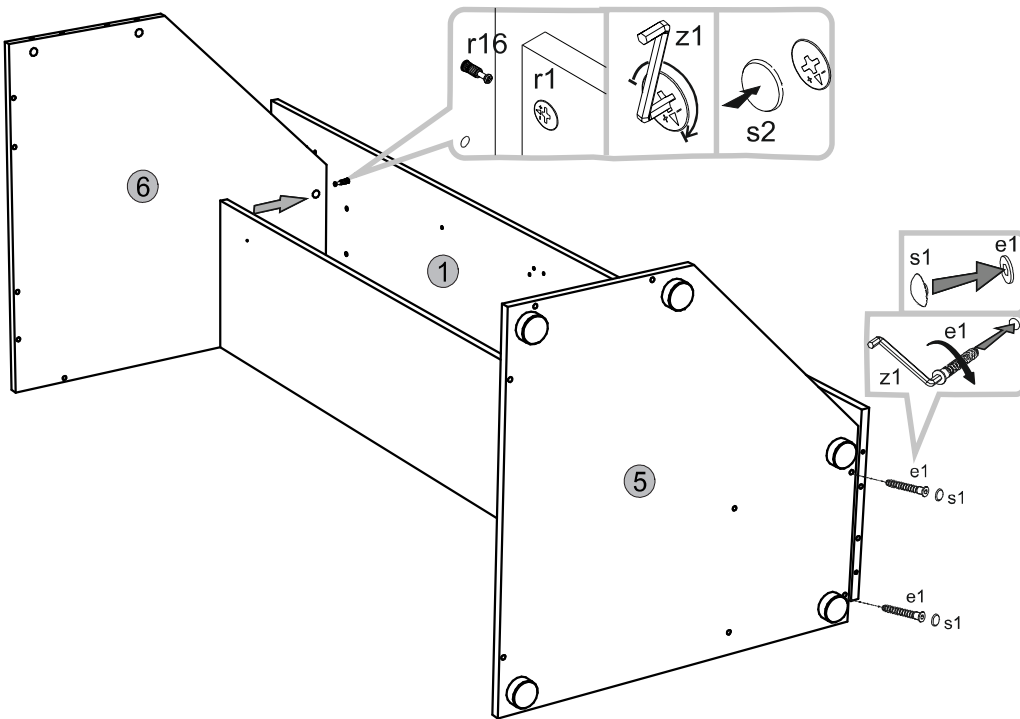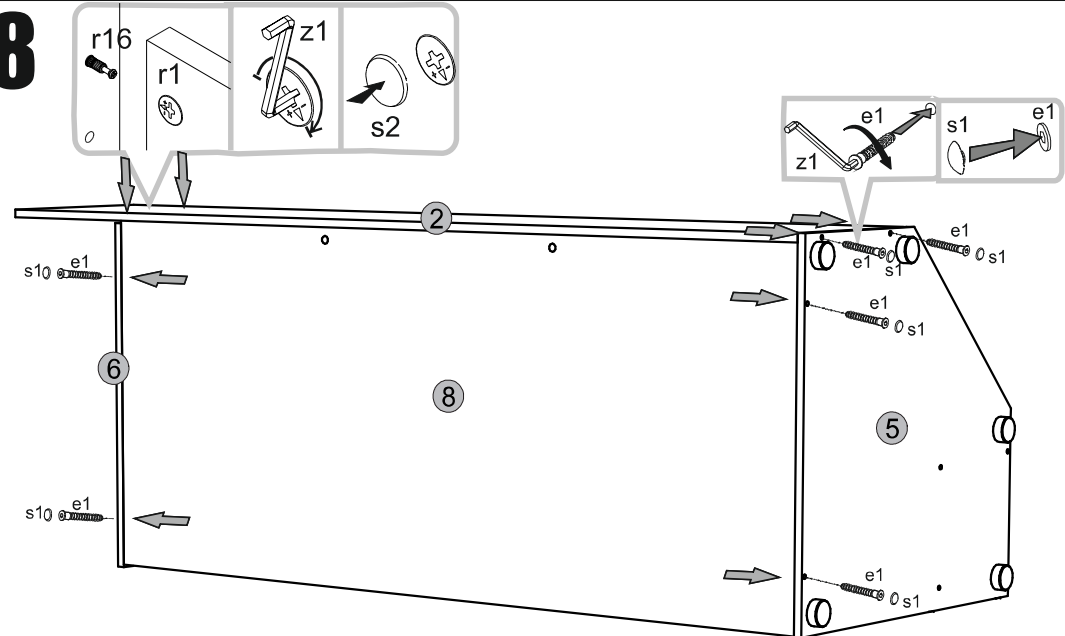5**7****6****8**

9

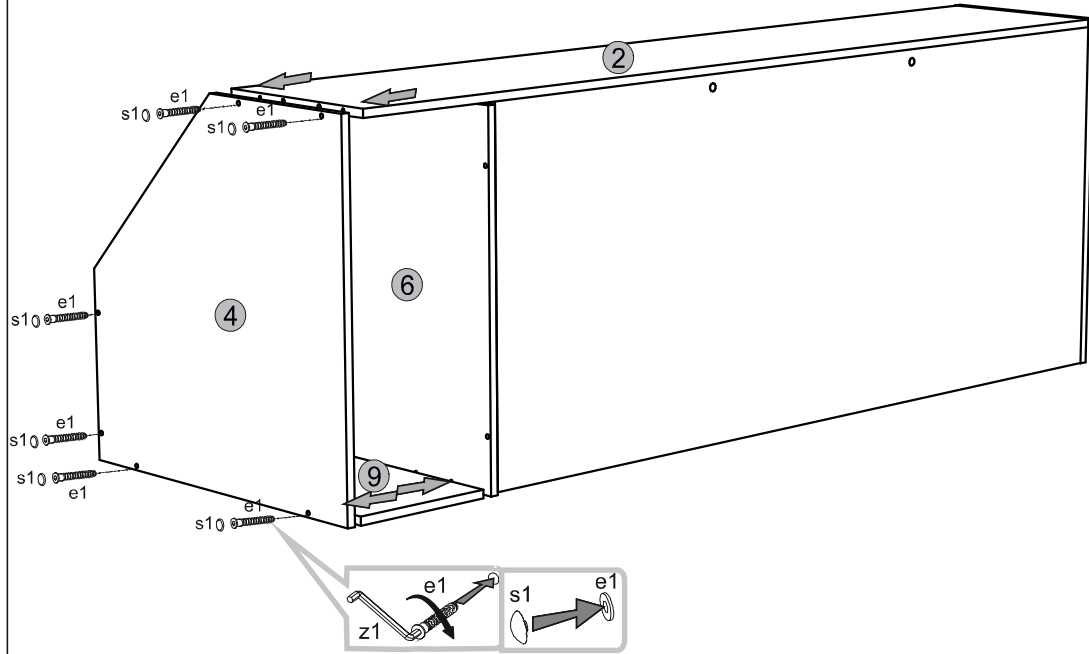

11

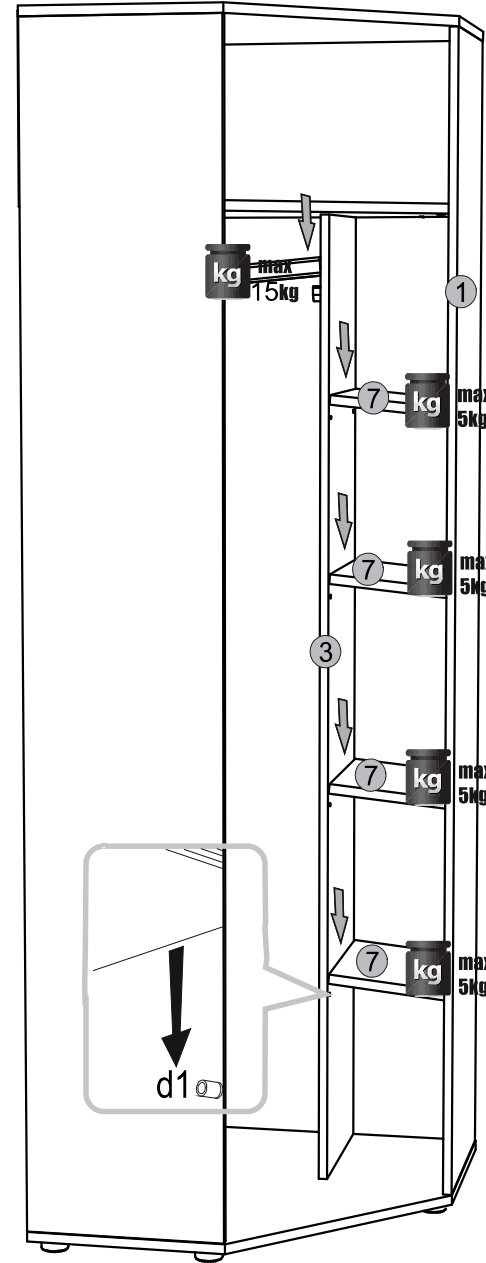

10

