




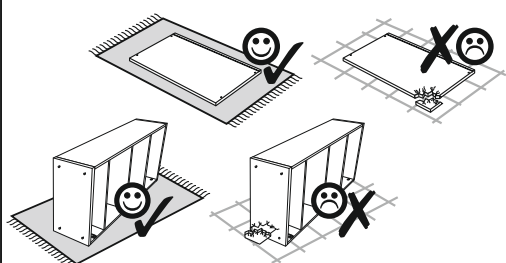


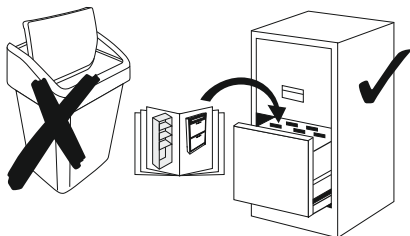

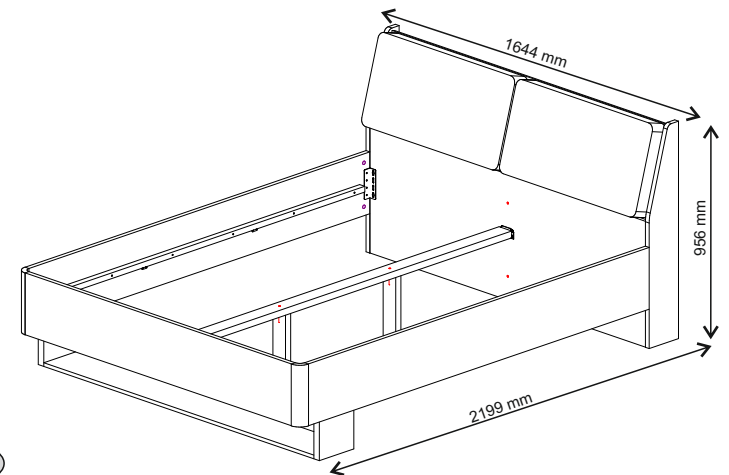

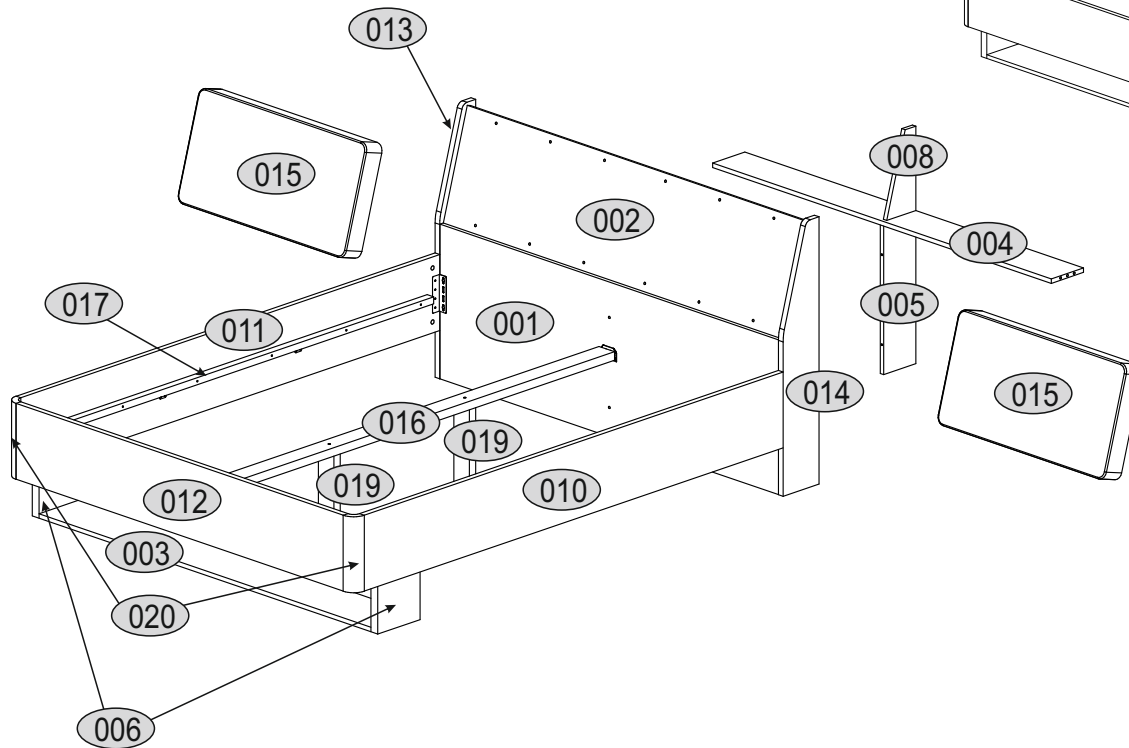

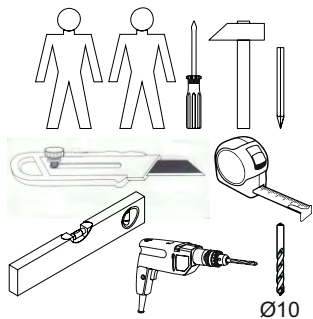

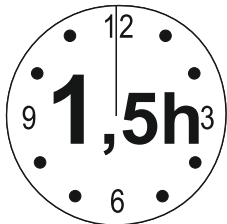
















Installation manual

Avanti: Bed 160




Code	Dimensions				Package
001	1600	550	16	1	2/3
002	1600	405	16	1	2/3
003	1568	200	16	1	2/3
004	1600	152	16	1	2/3
005	528	152	16	1	2/3
006	228	200	32	2	2/3
008	300	137	16	1	1/3
010	1979	270	22	1	1/3
011	1979	270	22	1	1/3
012	1546	270	22	1	1/3
013	950	170	22	1	2/3
014	950	170	22	1	2/3
015	792	398	16	2	3/3
016	1980	70	30	1	1/3
017	1880	30	25	2	1/3
019	285	70	30	2	1/3
020	270	50	50	2	1/3
accessories					1 / 1/3


<p>x4 e1 Ø7x50</p> 	<p>x12 e22 Ø7x28</p> 	<p>x2 e27 Ø7x70</p> 	<p>x18 s1</p> 
<p>x17 r1 Ø15x12</p> 	<p>x4 r10</p> 	<p>x25 r16</p> 	<p>x33 s2</p> 
<p>x16 r3 Ø15x15</p> 	<p>x6 p36 Ø 4x25mm</p> 	<p>x12 p10 Ø4x40 mm</p> 	<p>x6 p21 Ø 4x30mm</p> 
<p>x18 p25 Ø 3.5x16mm</p> 	<p>x34 f1 Ø8x30</p> 	<p>x13 k1</p> 	<p>x4 n221.01.05</p> 
<p>x16 e2 Ø 6.3x13mm</p> 	<p>x8 e3 Ø 6.3x13mm</p> 	<p>x2 n63</p> 	<p>x1 z1</p> 
<p>x2 n34¹</p> 	<p>x2 n34²</p> 		

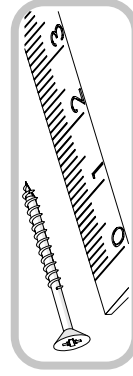


1

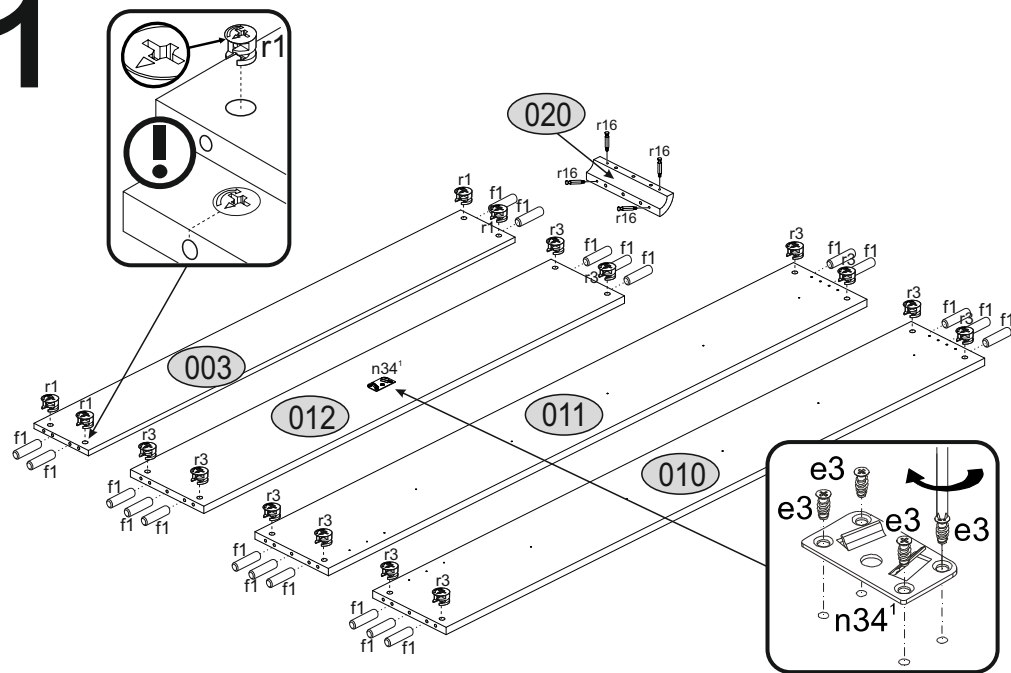


2

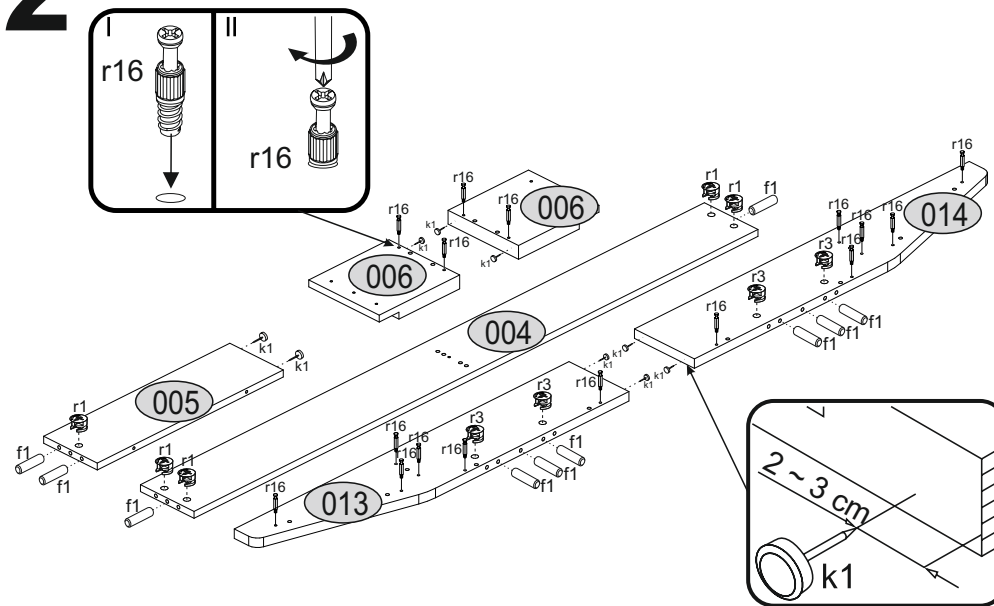


3

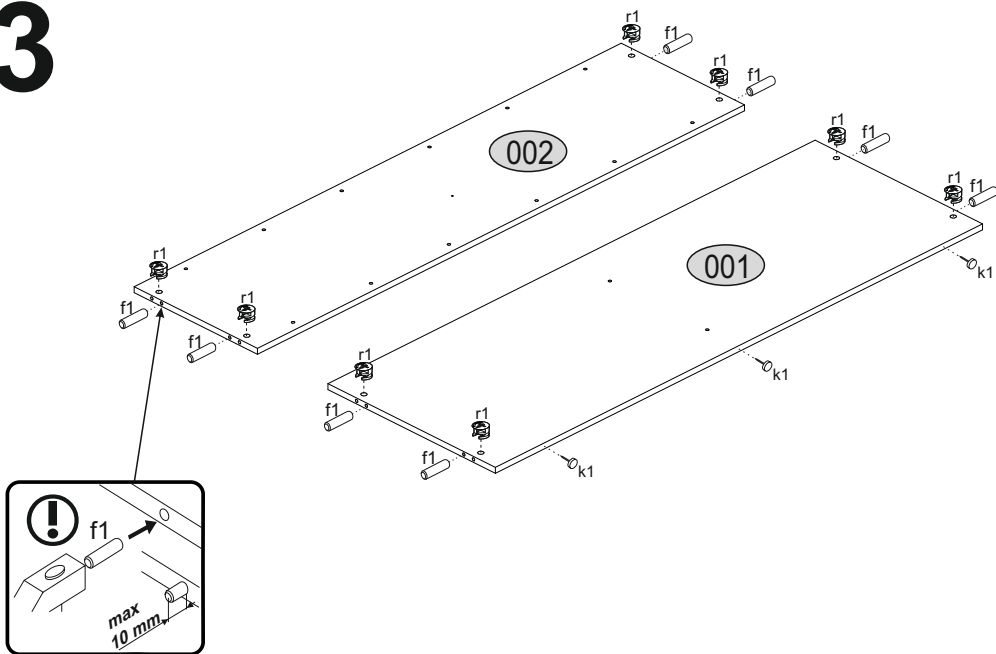


4

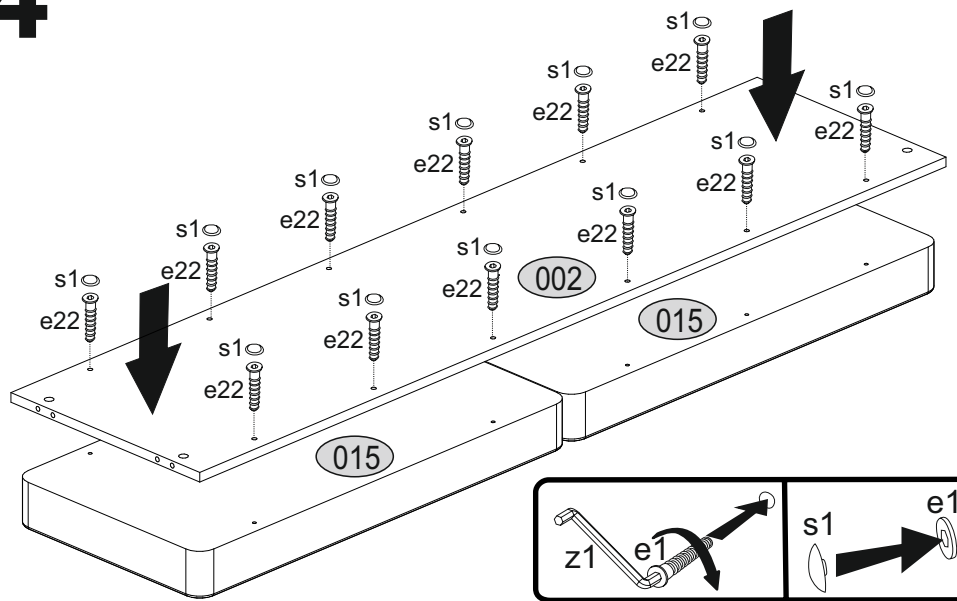


5

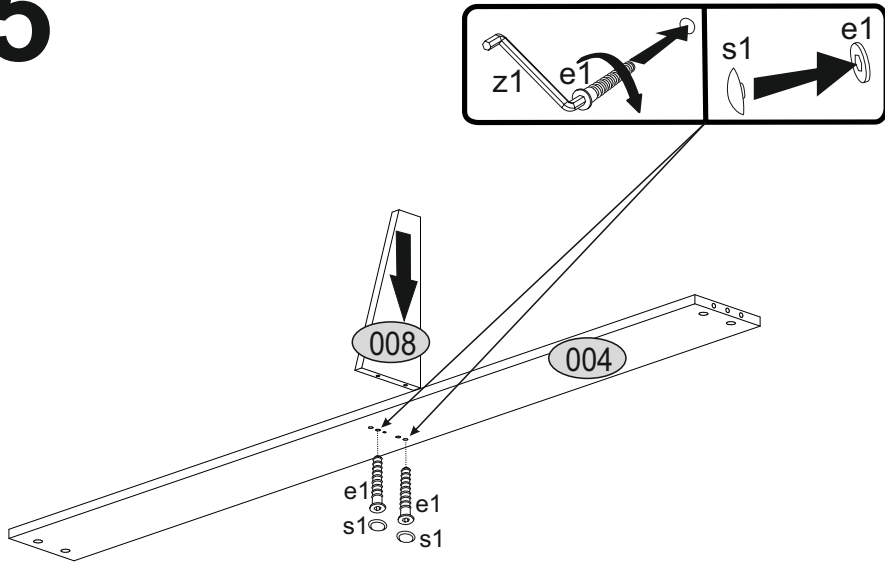


6




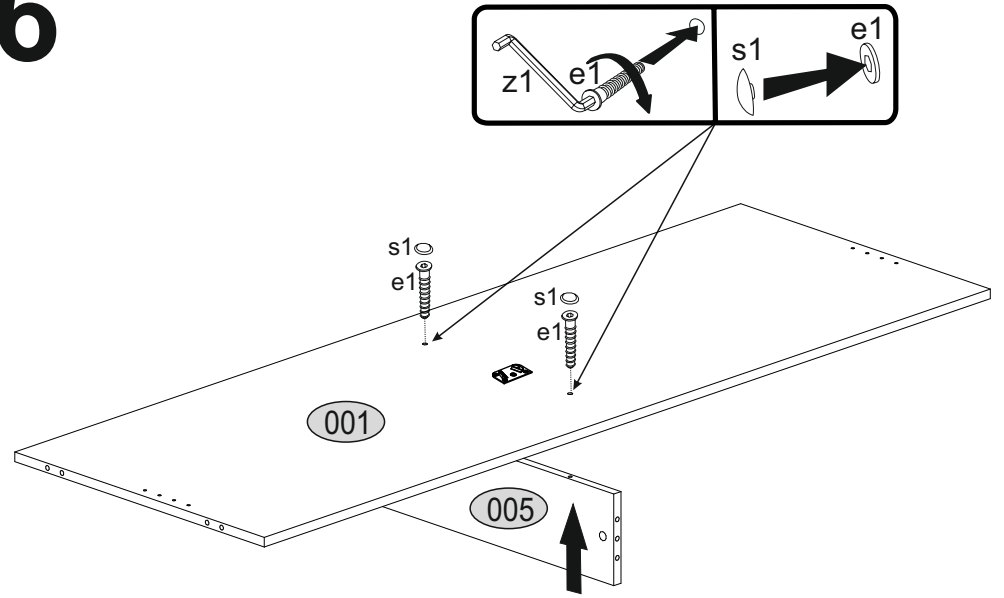


7

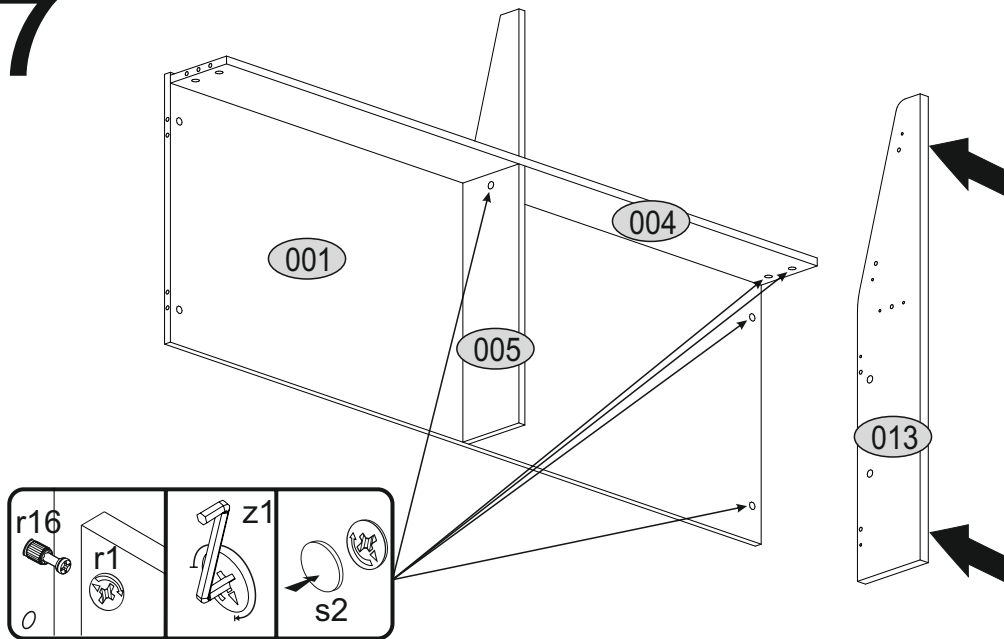


8

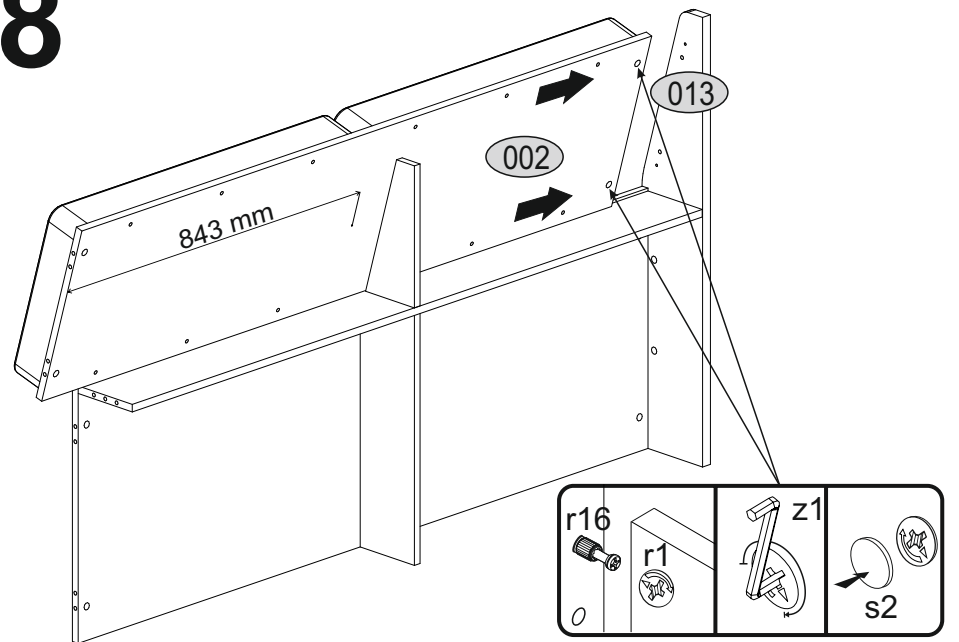


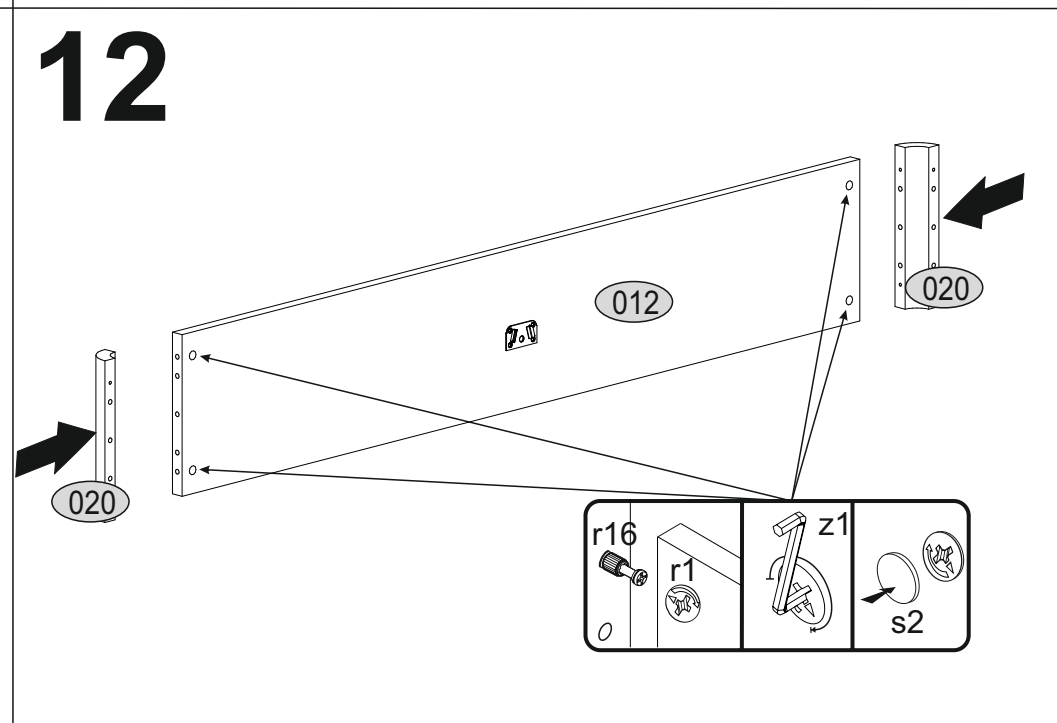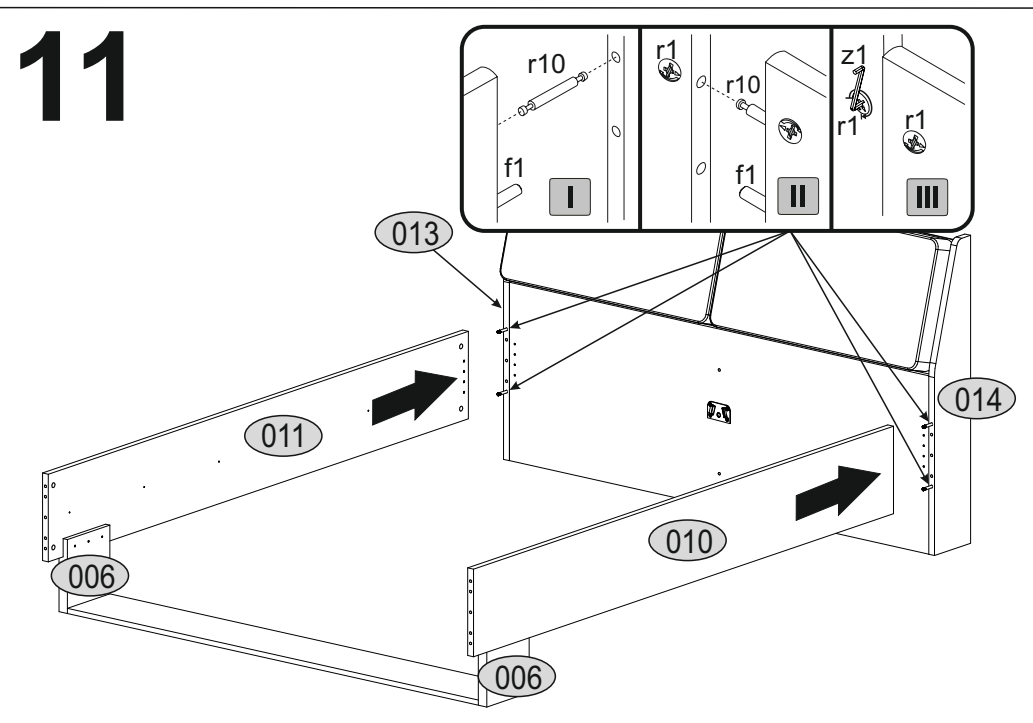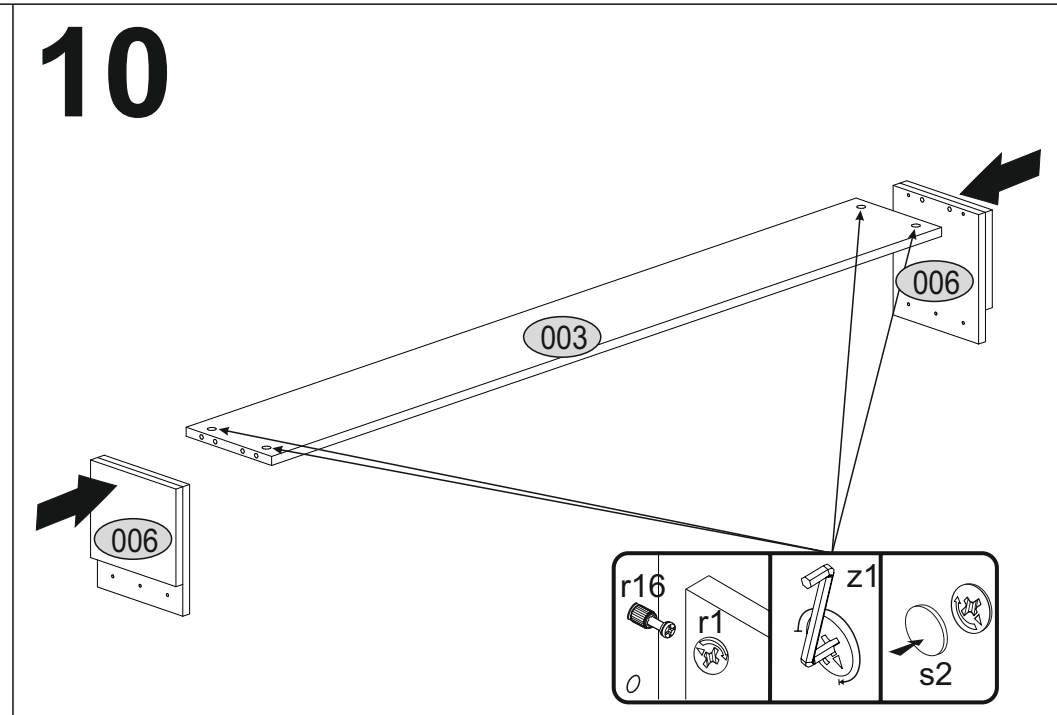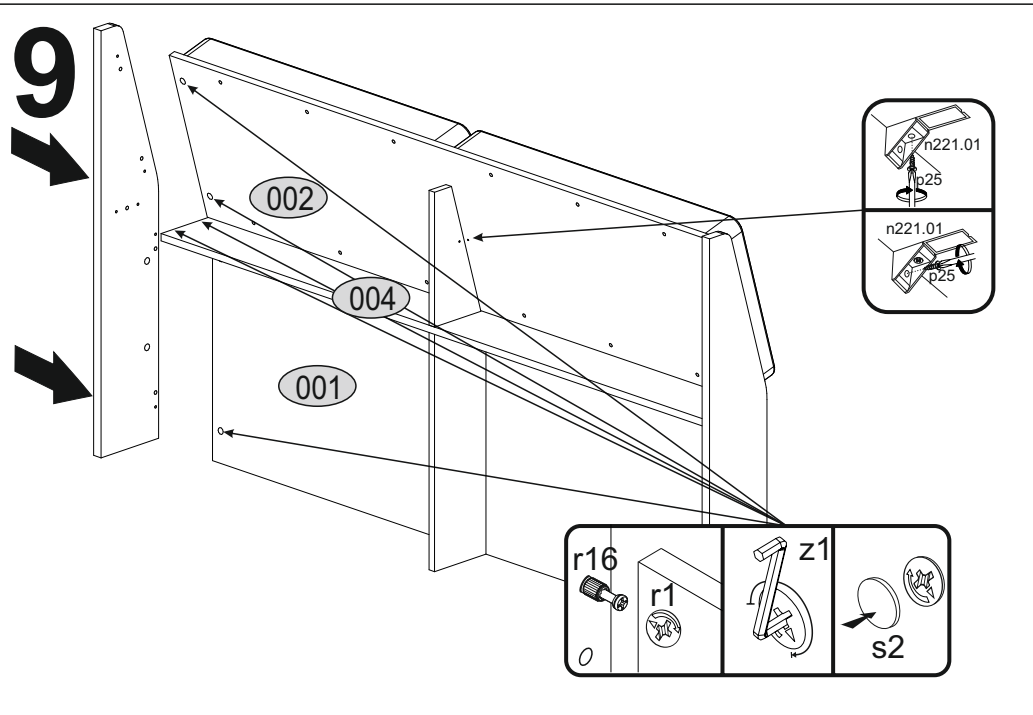


13

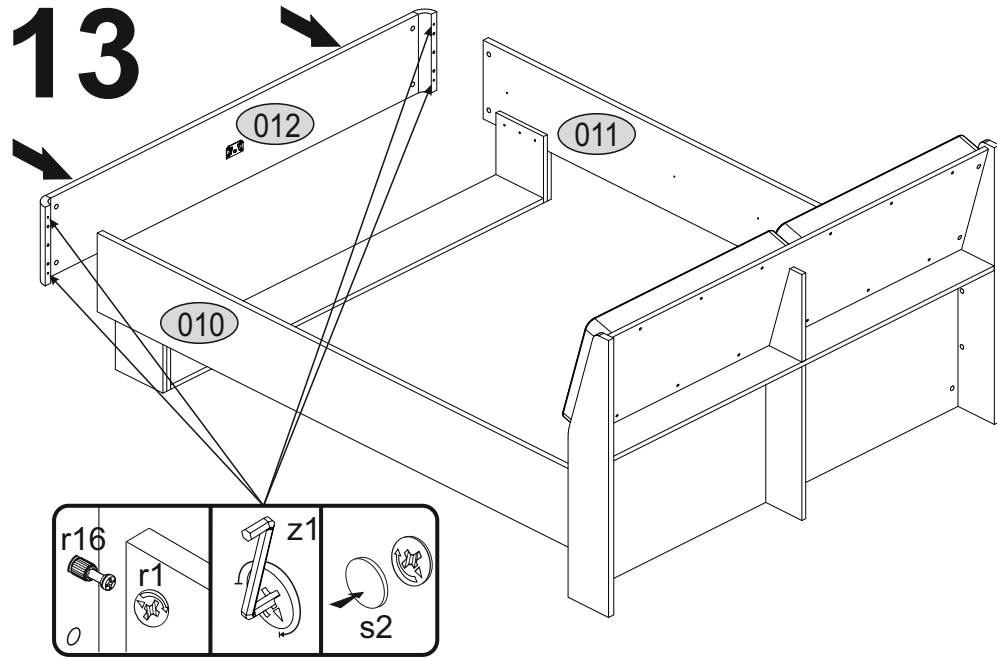

14

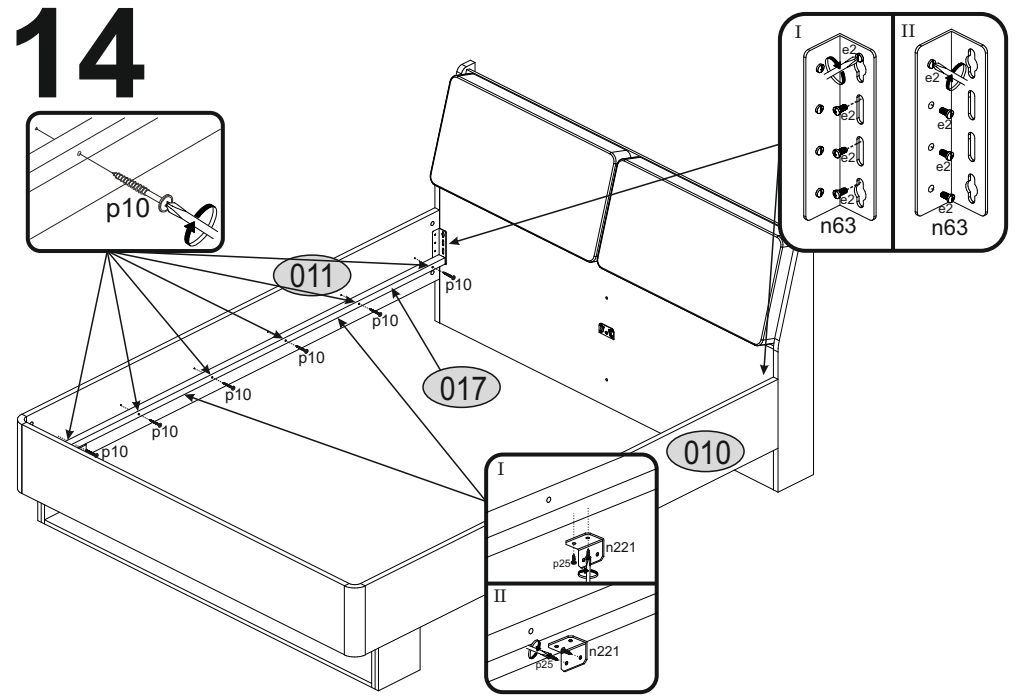

15

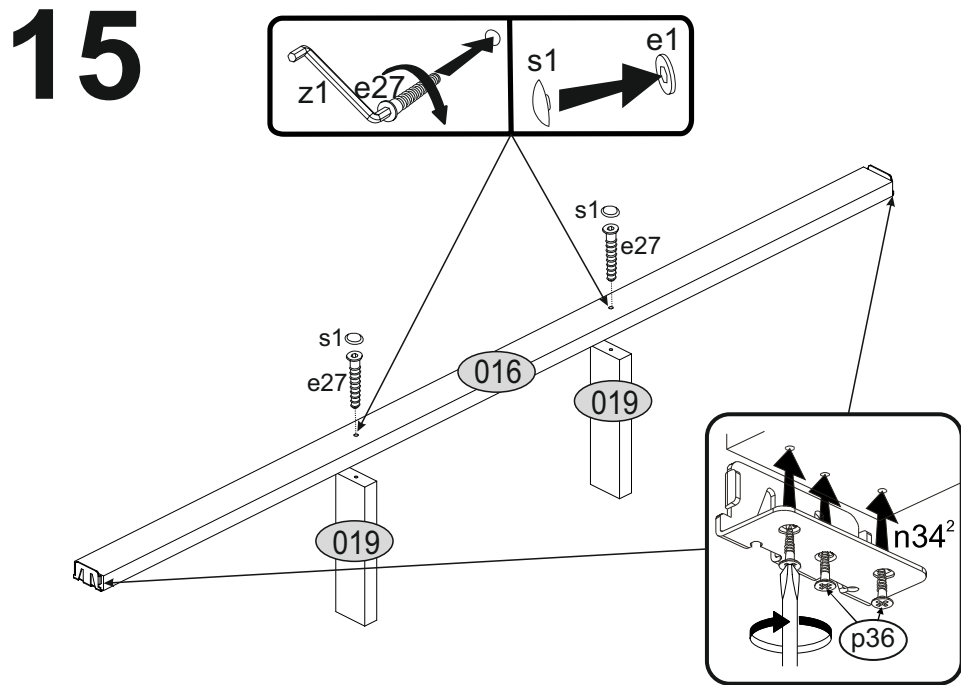

16

