




Instalation manual





LORA: KOM_1D1K

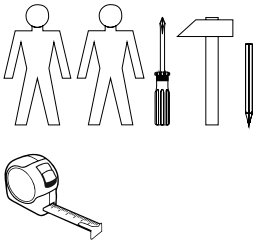

460 mm









280 mm

900 mm

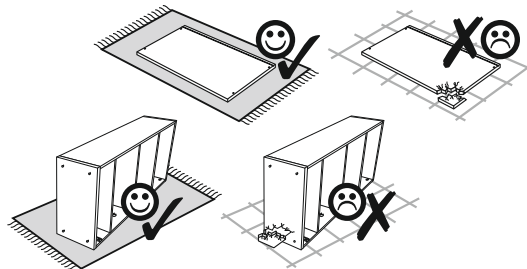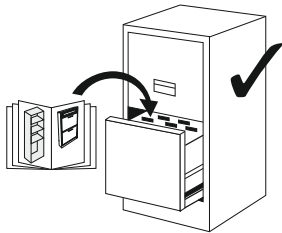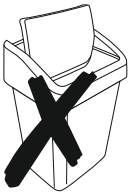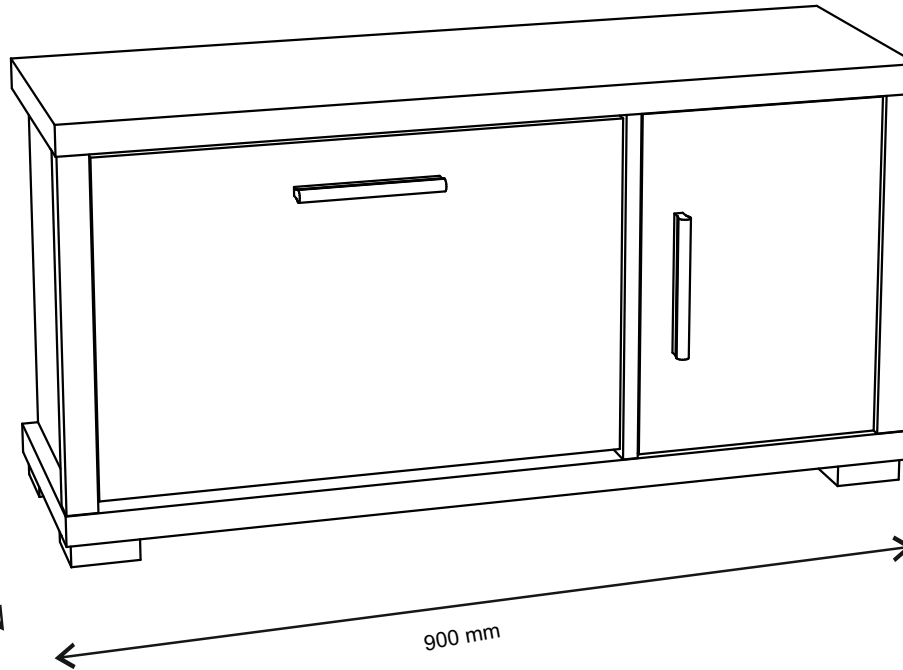

12x r16	10x s2	1x y1	1x z1	
18x φ3.5x16 mm p25	4x φ4x30 mm p9	2x K1.6 a1	2x b1	12x φ15x12mm #16 r1
2x M4x20 mm J1	4x k150	1x m9°	1x m9°	8x φ4x35 mm p6
2x c235	4x φ5x17 mm d1	4x φ6.3x13 mm e2	12x φ8x30 mm f1	20x l1



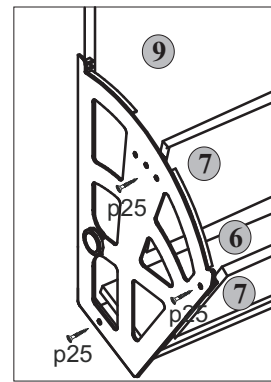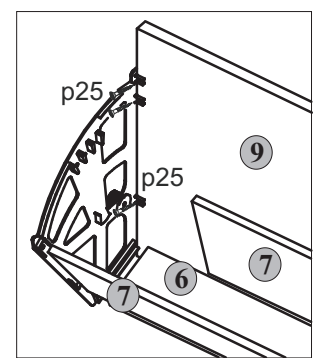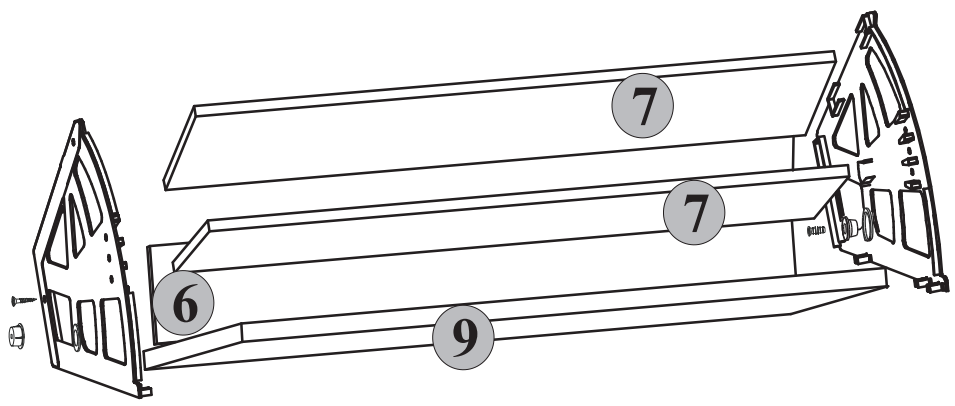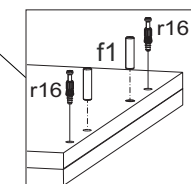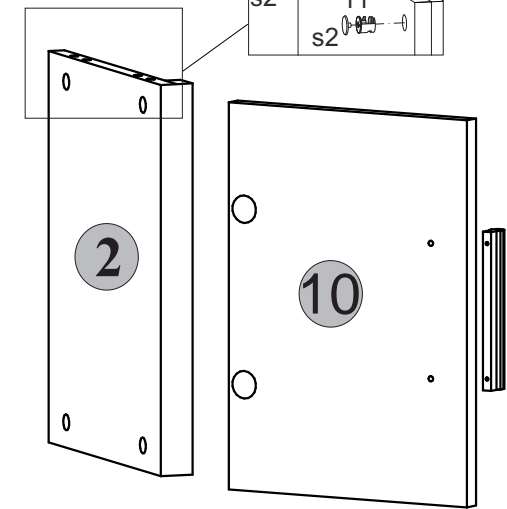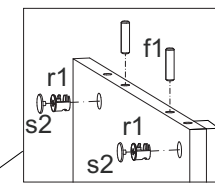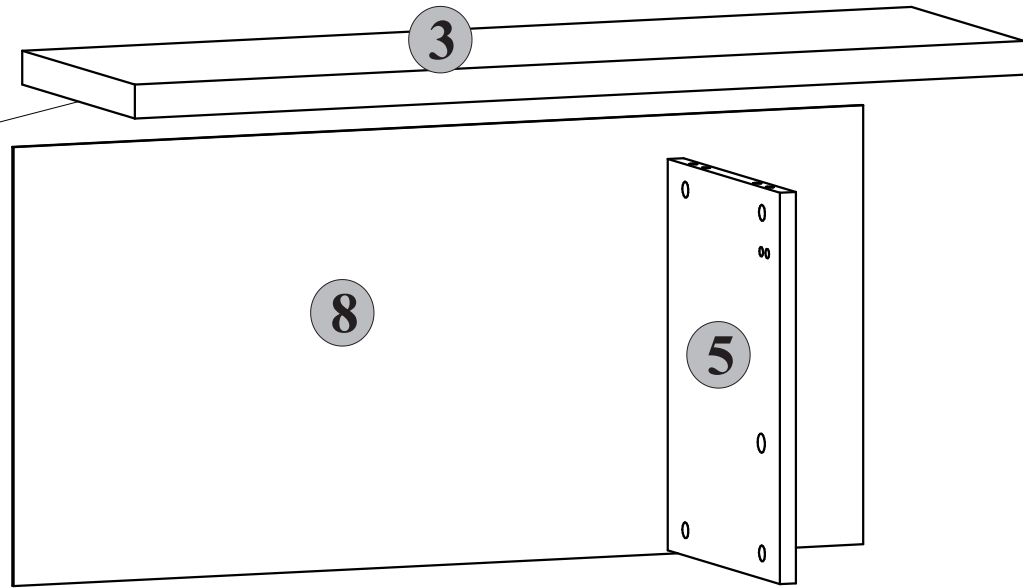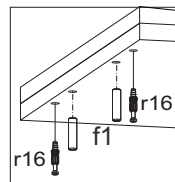

No					
1	I-106	370	281	16/32	1
2	I-107	370	281	16/32	1
3	I-205	900	282	16/32	1
4	I-206	900	282	16/32	1
5	I-108	370	281	16	1
6	I-306	540	85	10	1
7	I-305	540	140	10	2
8	I-605	860	415	3	1
9	I-007	355	546	16	1
10	I-008	366	263	16	1