

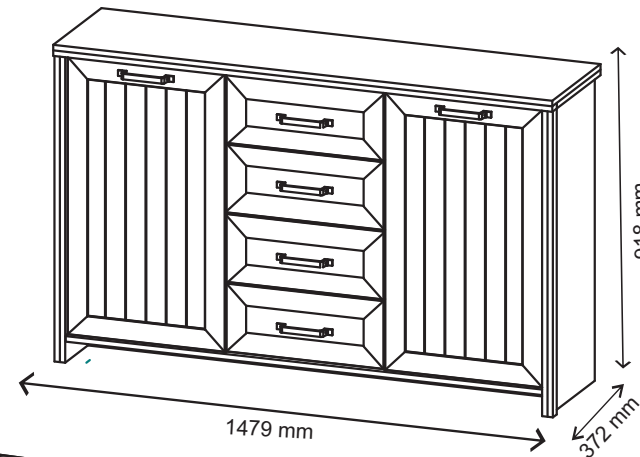
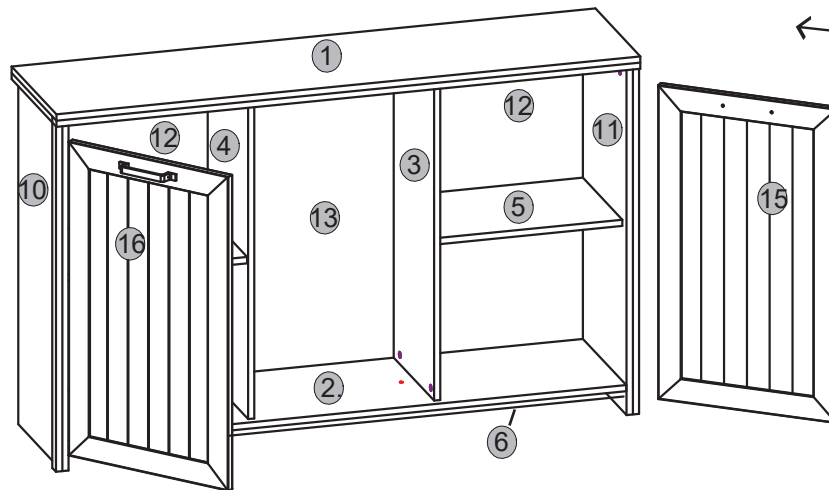
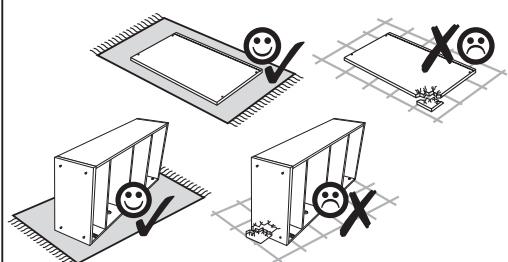
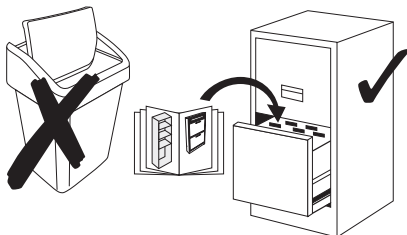


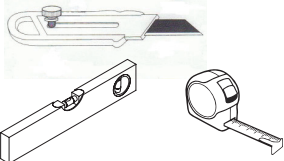

# Instalation manual

## KOMODA VERNE 5

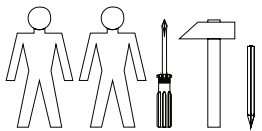


Element symbol	Dimensions		Code	Package
1	1479	372	1 KOM_2D4S_vagonka.001	2/3
2	1413	359	1 KOM_2D4S_vagonka.002	2/3
3	826	334	1 KOM_2D4S_vagonka.003	2/3
4	826	334	1 KOM_2D4S_vagonka.004	2/3
5	463	327	2 KOM_2D4S_vagonka.005	2/3
6	1413	60	1 KOM_2D4S_vagonka.006	2/3
7	397	120	4 KOM_2D4S_vagonka.007	1/3
8	300	120	4 KOM_2D4S_vagonka.008	1/3
9	300	120	4 KOM_2D4S_vagonka.009	1/3
10	886	365	1 KOM_2D4S_vagonka.012	1/3
11	886	365	1 KOM_2D4S_vagonka.013	1/3
12	851	480	2 KOM_2D4S_vagonka.014	2/3
13	851	471	1 KOM_2D4S_vagonka.015	2/3
14	415	302	4 KOM_2D4S_vagonka.016	1/3
15	804	467	1 KOM_2D4S_vagonka.017	3/3
16	804	467	1 KOM_2D4S_vagonka.018	3/3
17	198	467	4 KOM_2D4S_vagonka.019	3/3


1x φ10 mm f3	1x φ5x60 mm p17	1x n14	6x k1	6x φ3x16 mm p52	6x n260.01.007 n260	6x 2Z285	50x l1
4x 300 mm lb-300	1x y1	12x M4x25 mm j8	8x φ5x17 mm d1	34x φ15x12mm #16 r1	34x r16	34x s2	
1x z1	34x φ8x30 mm f1	56x φ3,5x16 mm p25	18x s1	18x φ5x50 mm e1	4x a143	4x b119	




# 1

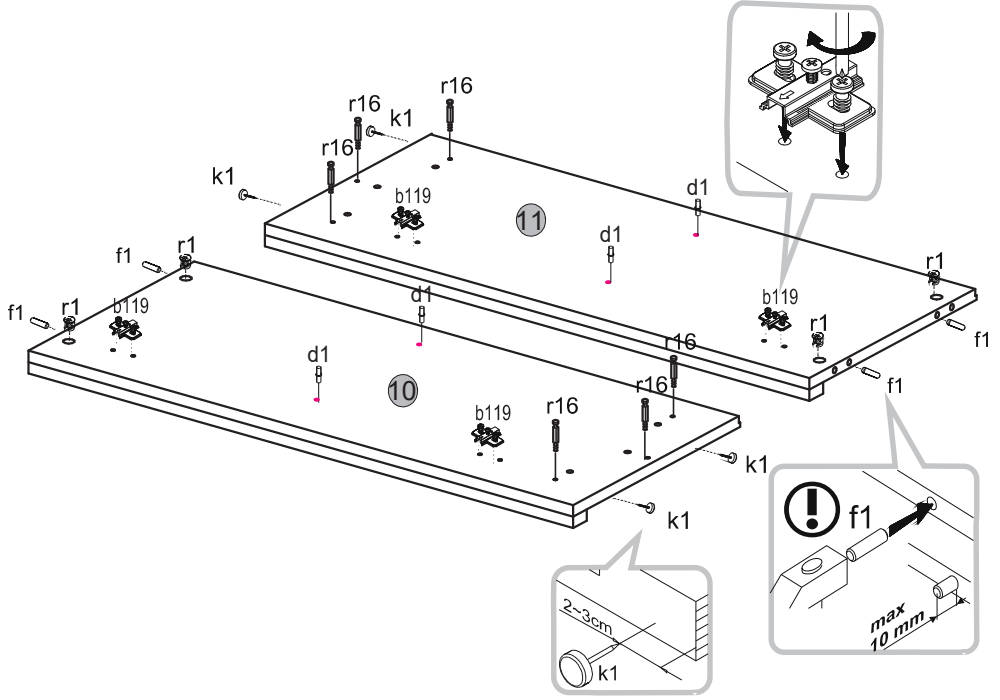


# 3

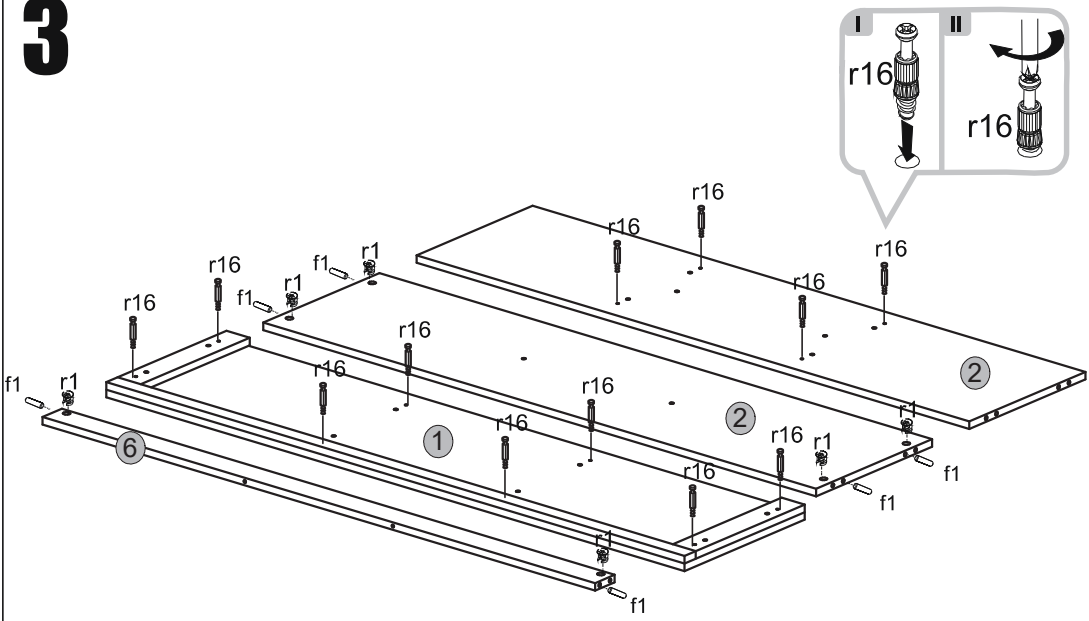


# 2

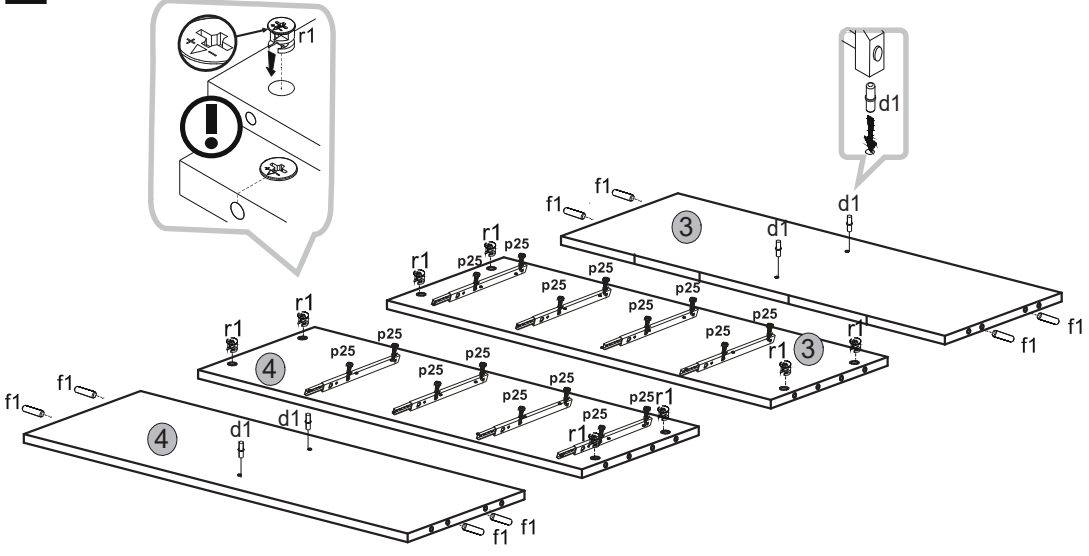


# 4

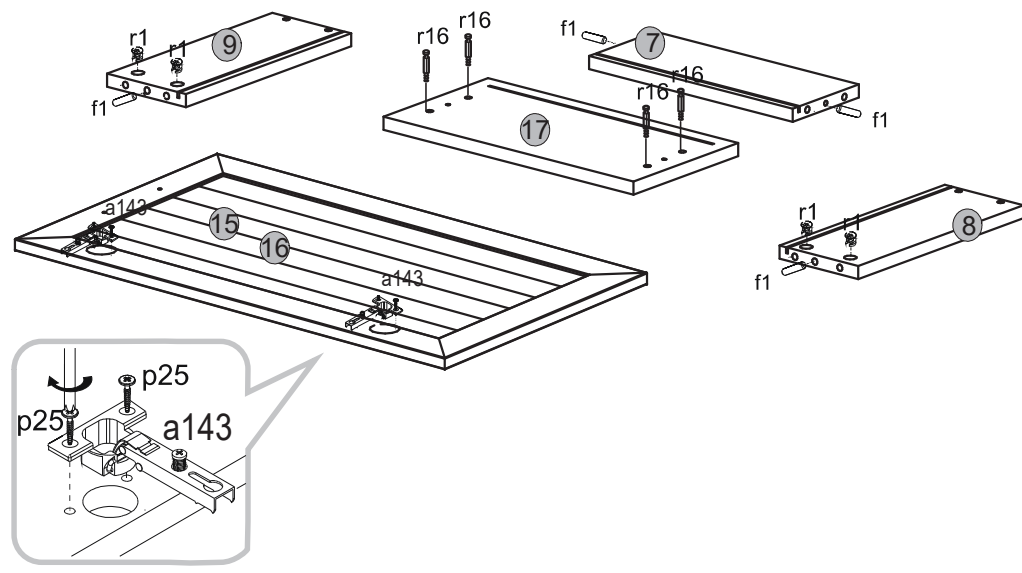


# 5

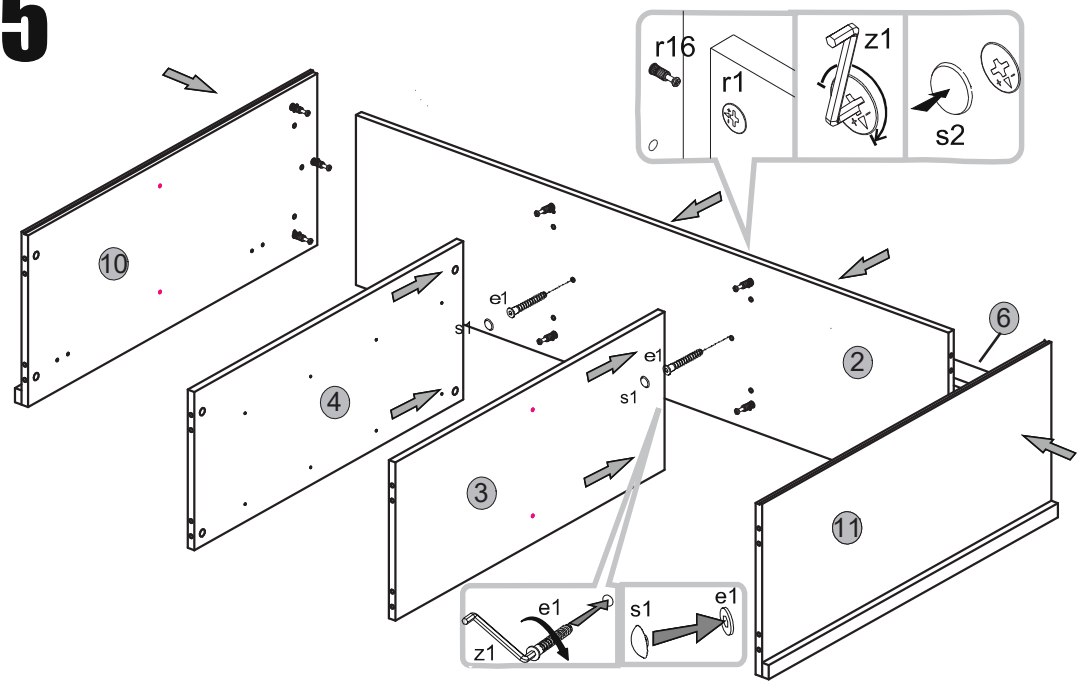


# 7

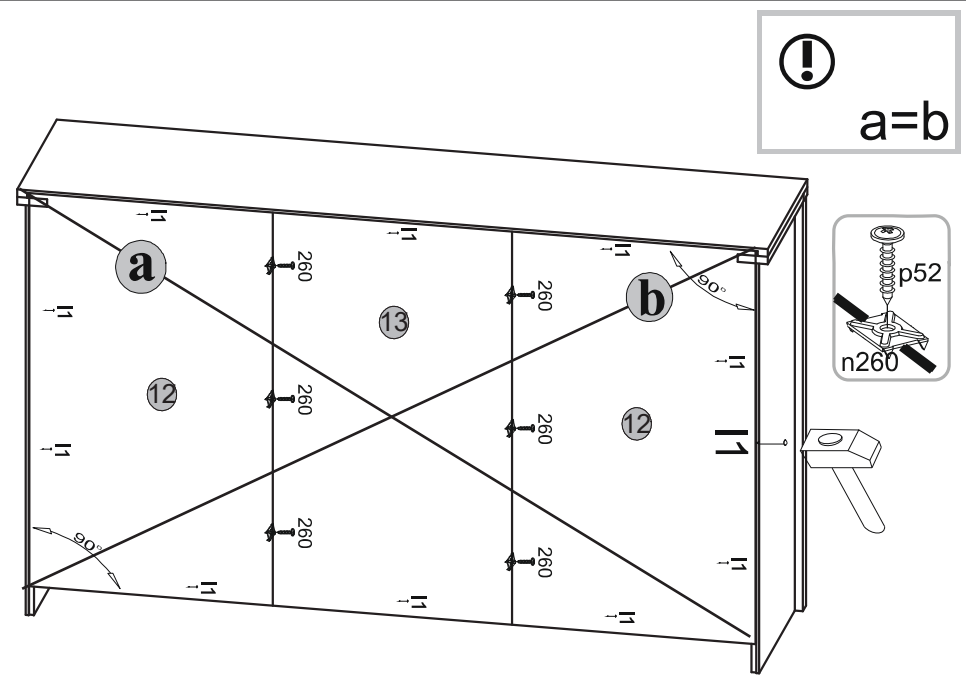






# 6

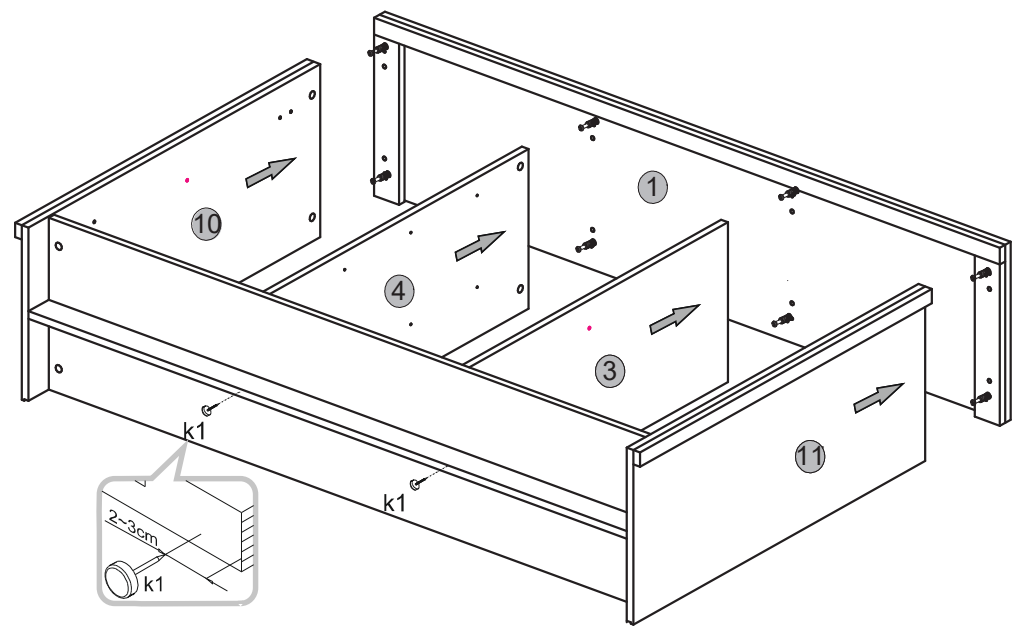

# 8

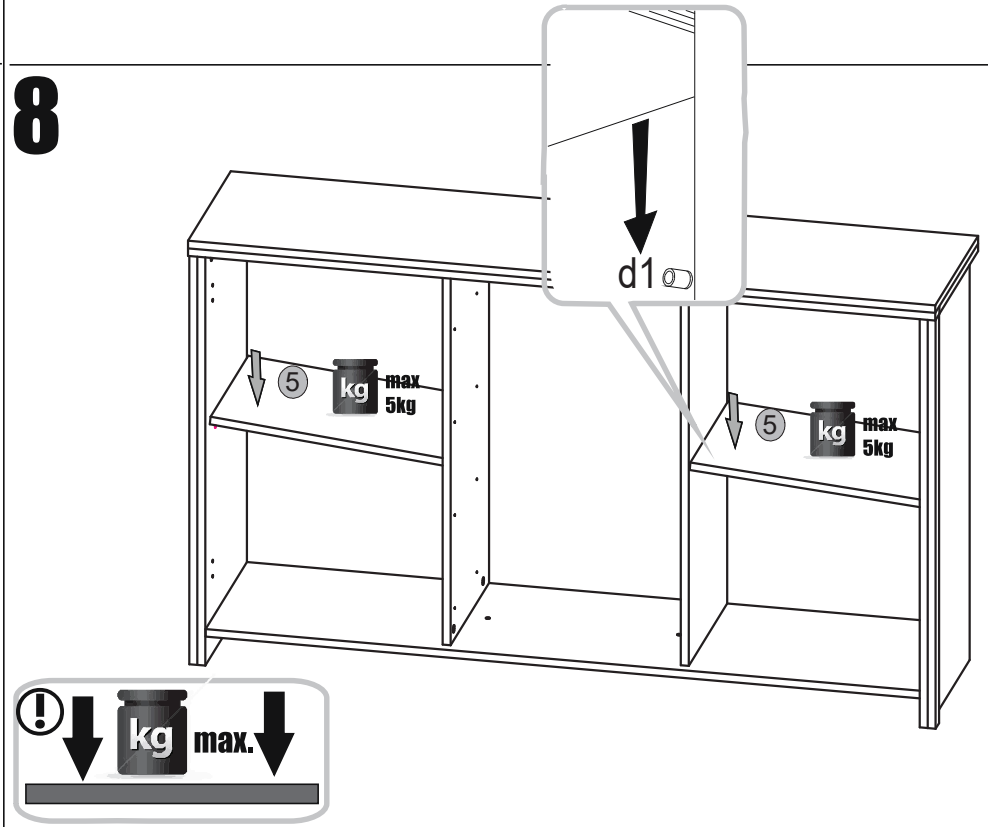

# 9

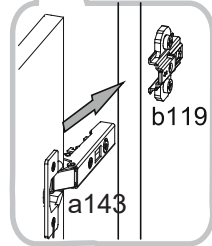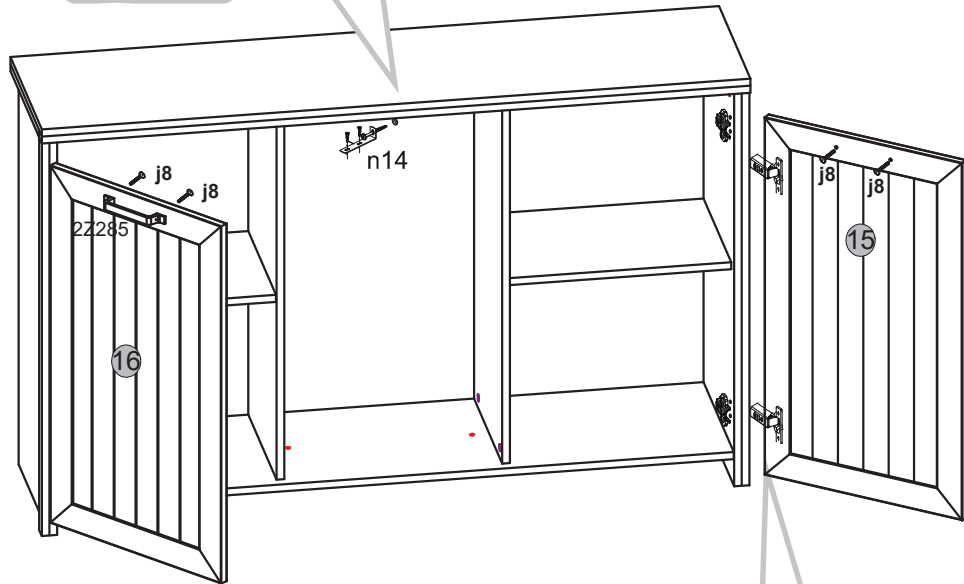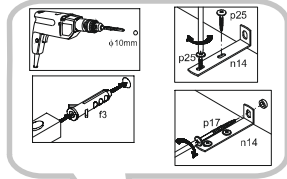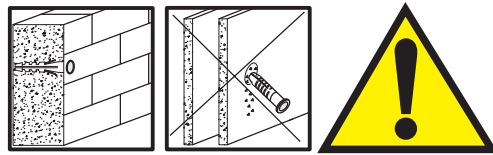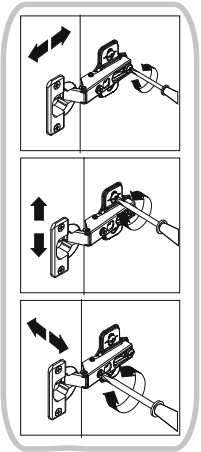

# 10

