

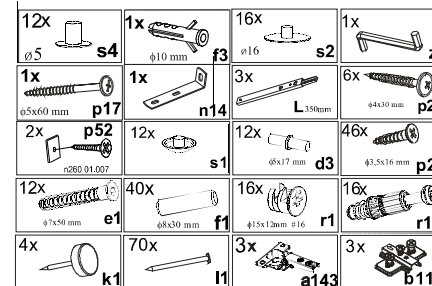
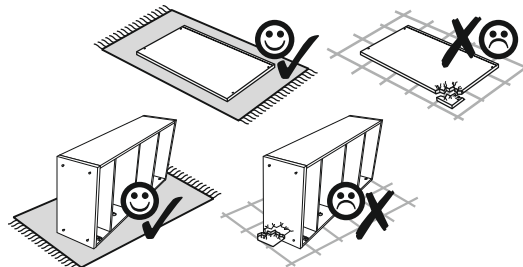
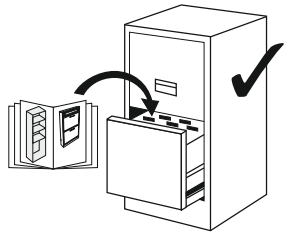
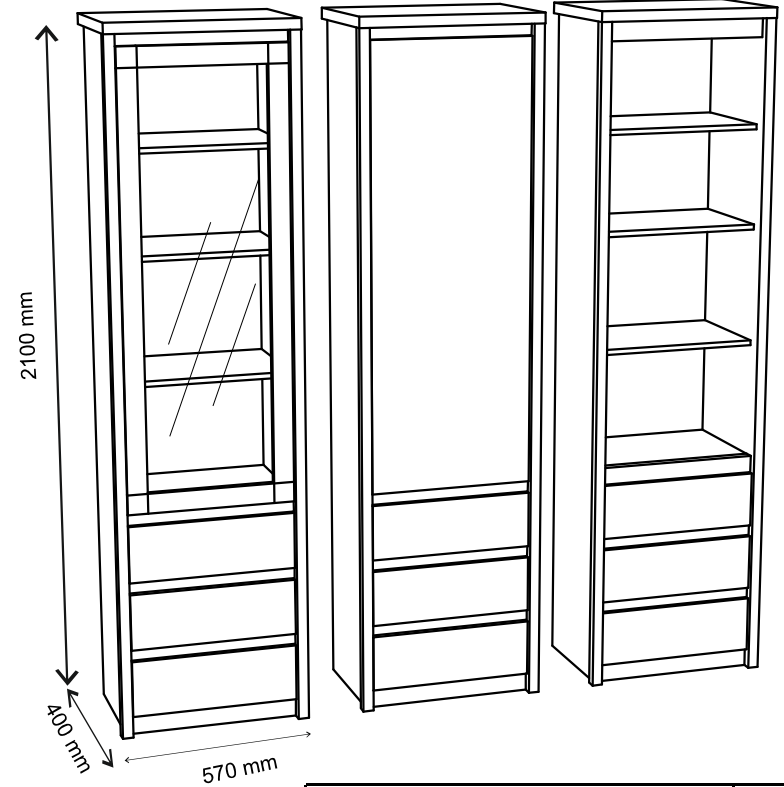
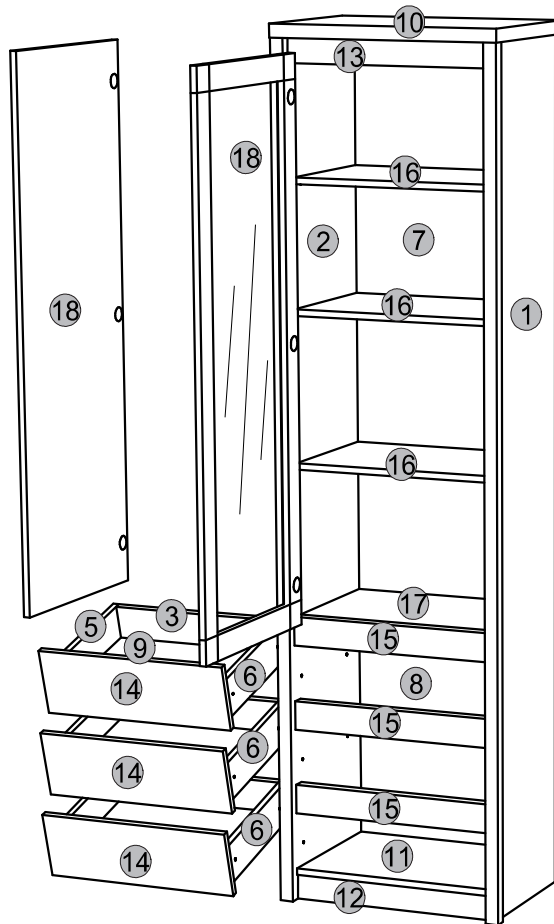


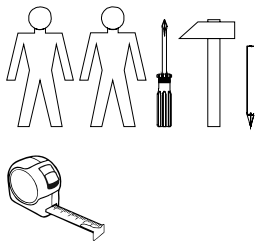

Instalation manual


NORTON: REG_1W3S,1D3S,3S

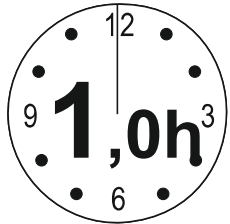


| Element symbol | Dimensions | | | | Code | Package |
|----------------|------------|-----|----------|---|-------|---------|
| 1 | 2068 | 398 | 16/32 | 1 | K-128 | 1/1 |
| 2 | 2068 | 398 | 16/32 | 1 | K-129 | 1/1 |
| 3 | 447 | 100 | 16 | 3 | K-525 | 1/1 |
| 4 | 447 | 100 | 16 | 3 | K-526 | 1/1 |
| 5 | 350 | 100 | 16 | 3 | K-527 | 1/1 2/2 |
| 6 | 350 | 100 | 16 | 3 | K-528 | 1/1 |
| 7 | 1407 | 522 | 3 | 1 | K-618 | 1/1 |
| 8 | 626 | 522 | 3 | 1 | K-619 | 1/1 |
| 9 | 461 | 332 | 3 | 3 | K-620 | 1/1 |
| 10 | 570 | 400 | 16/32/32 | 1 | K-209 | 2/2 |
| 11 | 504 | 369 | 16 | 1 | K-320 | 4/4 |
| 12 | 60 | 504 | 16 | 1 | K-421 | 2/2 |
| 13 | 60 | 504 | 16 | 1 | K-422 | 2/2 |
| 14 | 170 | 498 | 16 | 3 | K-012 | 3/3 |
| 15 | 70 | 504 | 30 | 3 | K-423 | 2/2 |
| 16 | 504 | 345 | 16 | 3 | K-321 | 1/1 |
| 17 | 504 | 339 | 16 | 1 | K-322 | 2/2 |
| 18 | 1354 | 498 | 16 | 1 | K-013 | 5/5 |




1

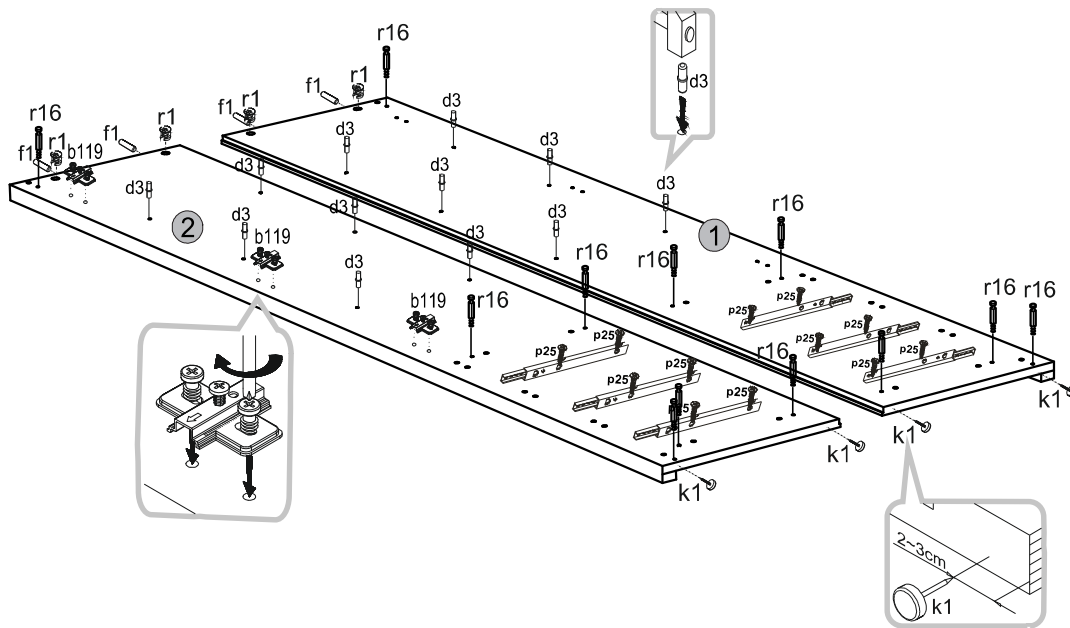


2

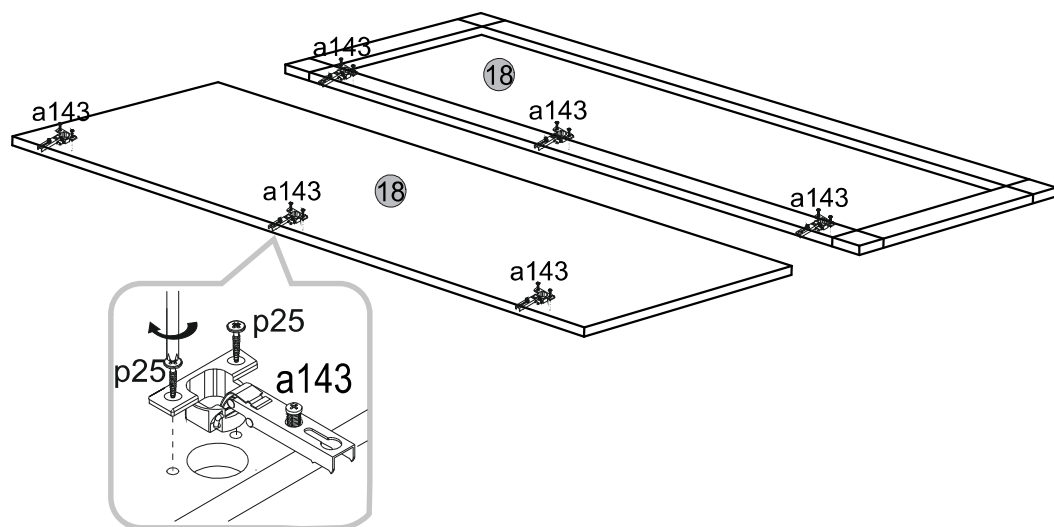


3

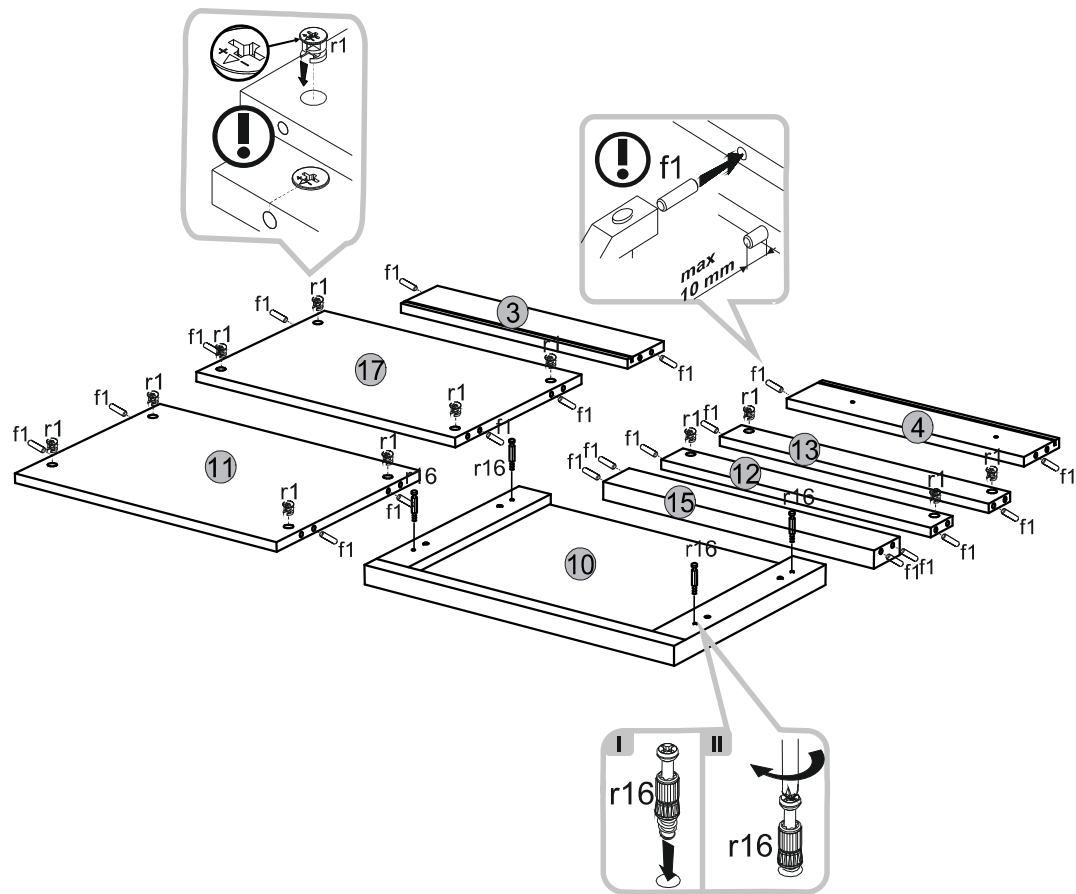


4

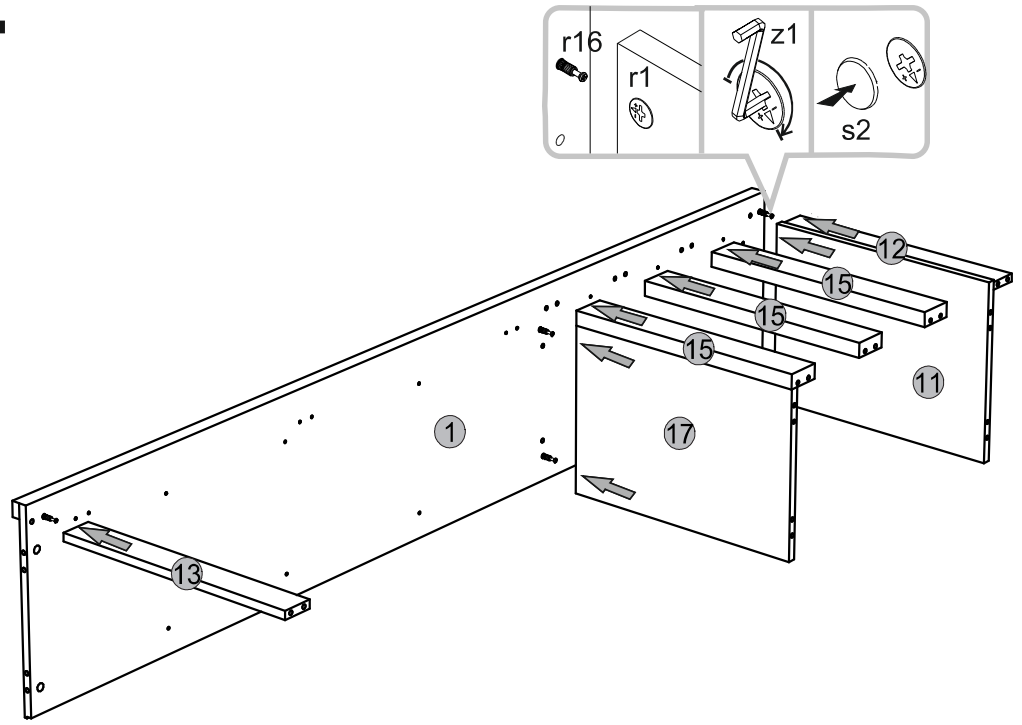




6

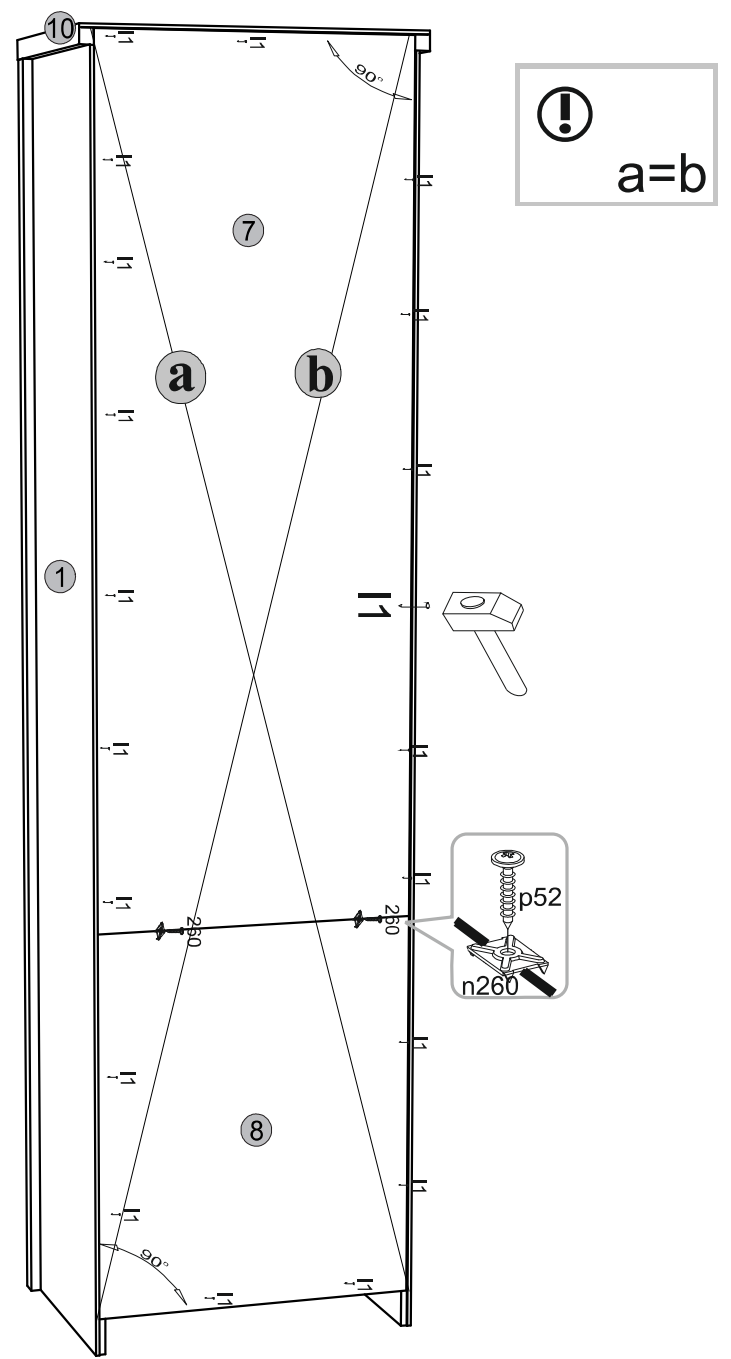


5

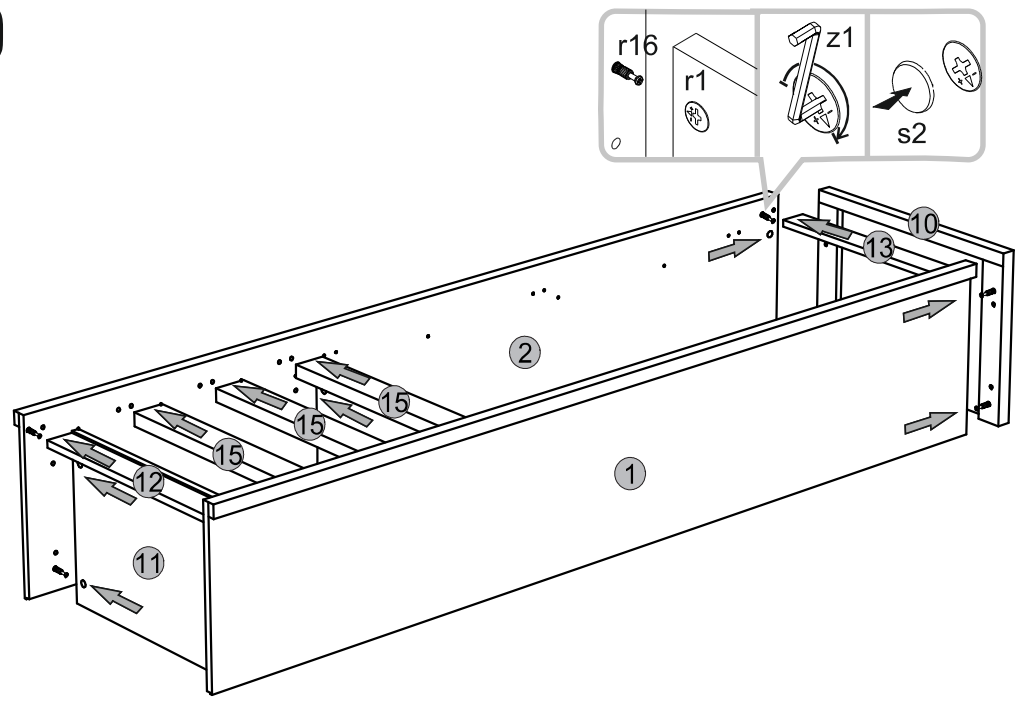



7

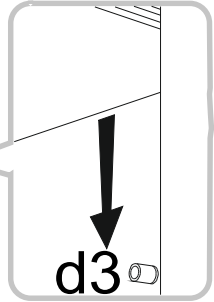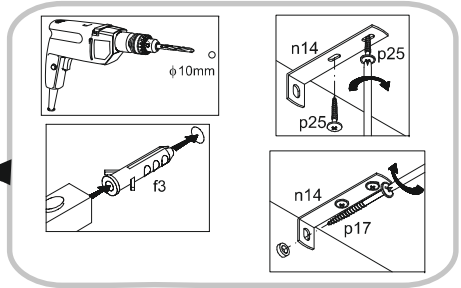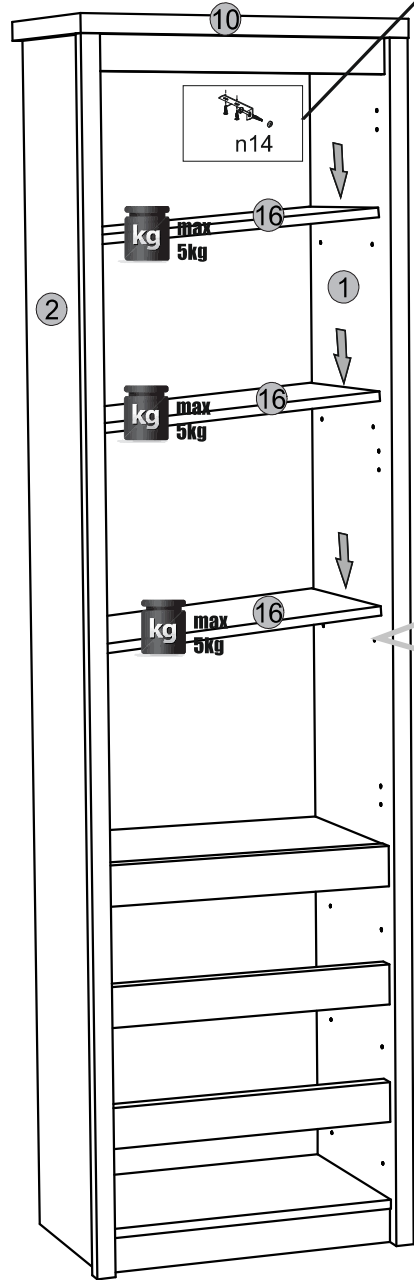

8

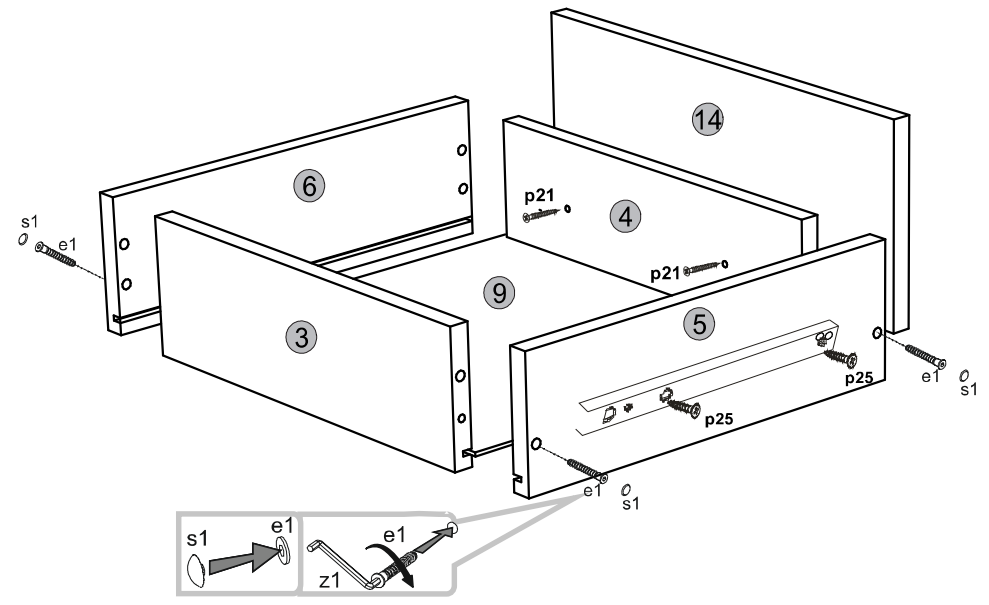


REG_3S

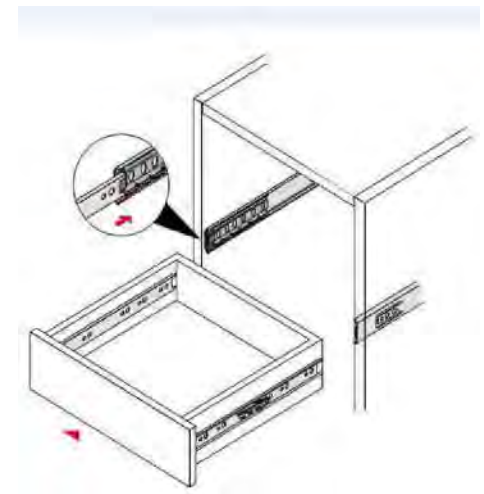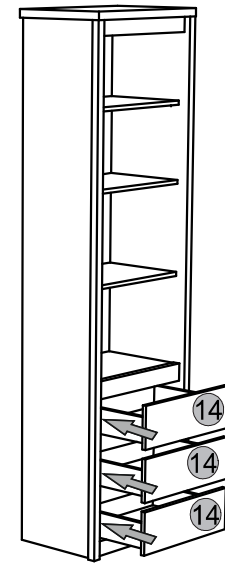


9 REG_1W3S




L

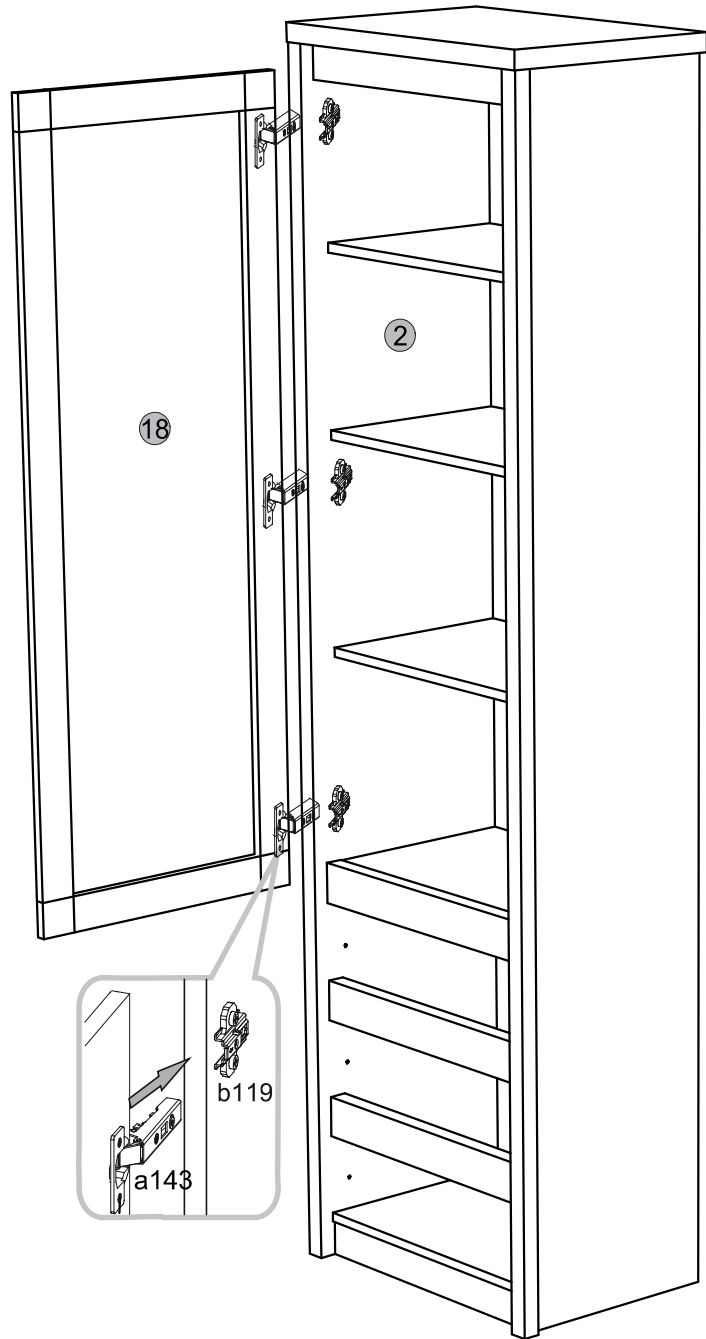

R

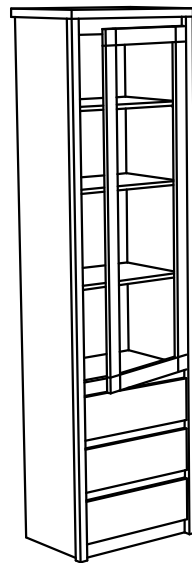


10

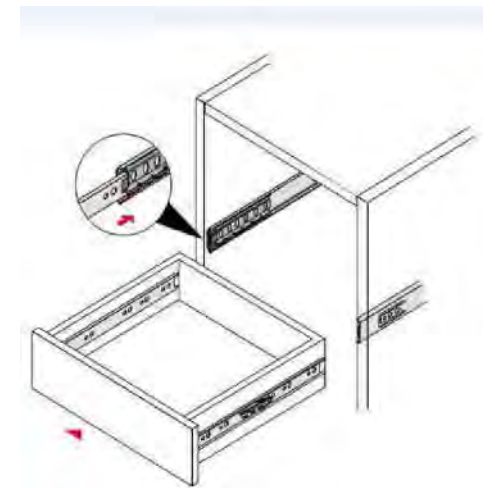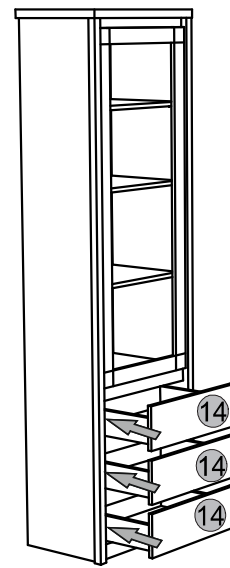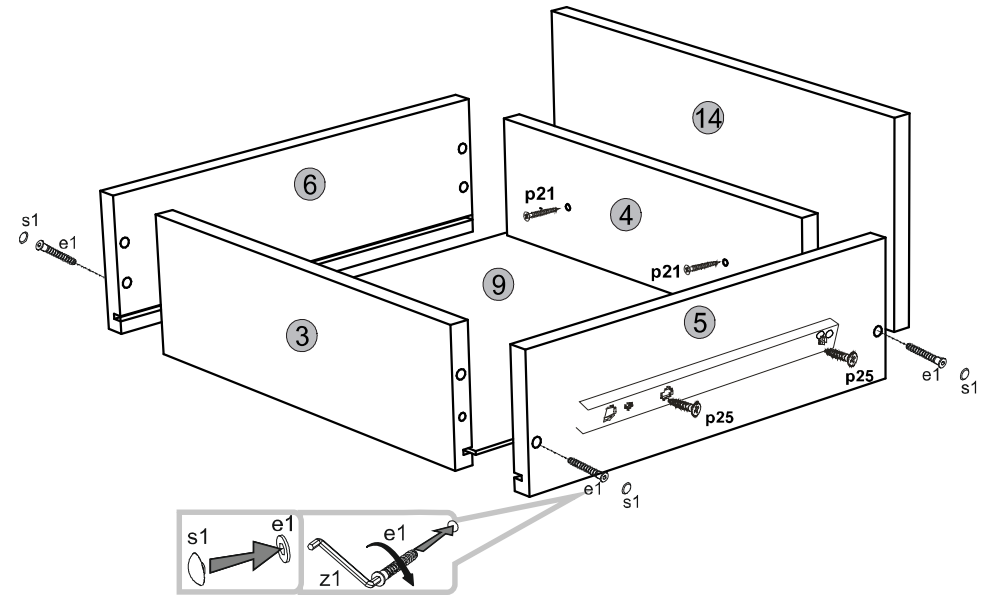


9 REG_1D3S

L

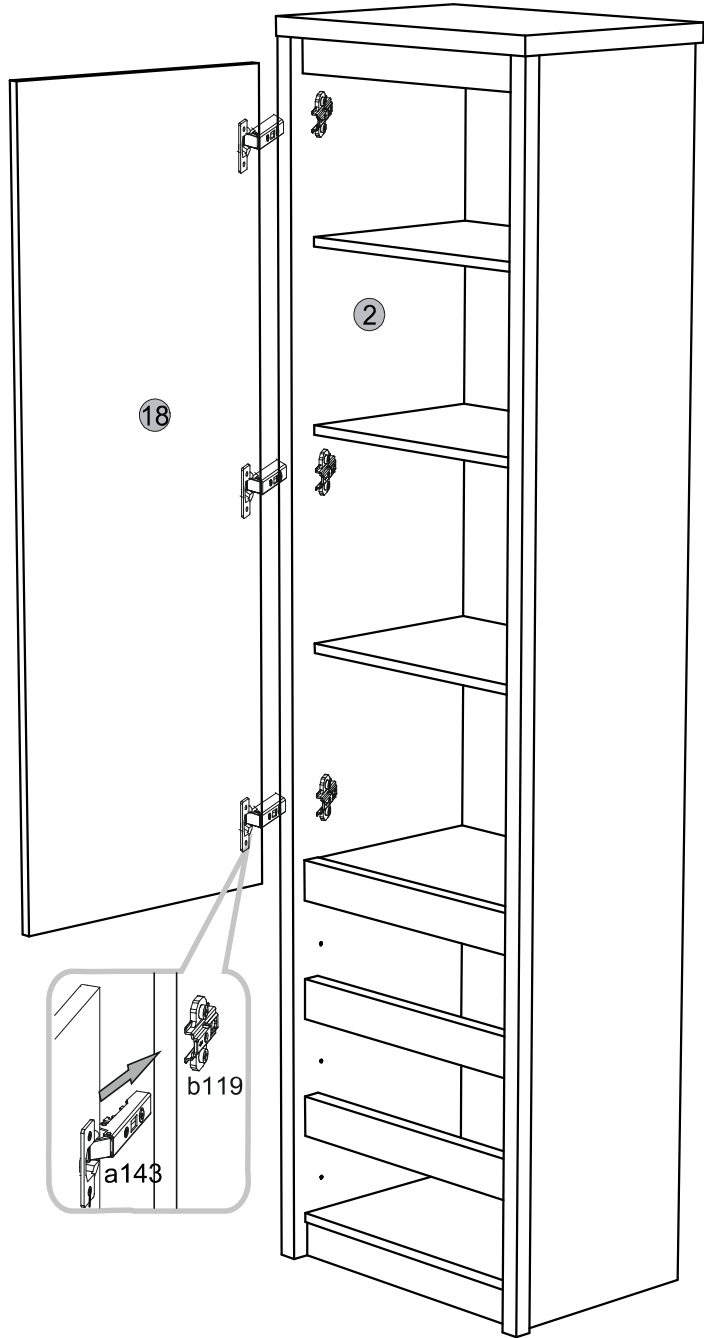

R

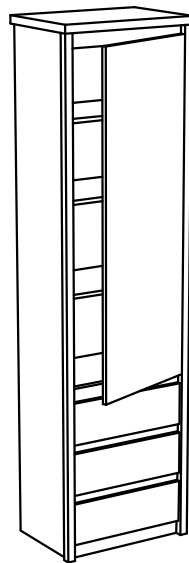

10

