

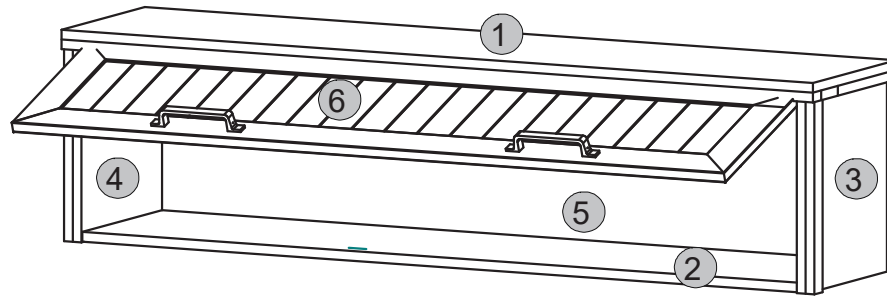
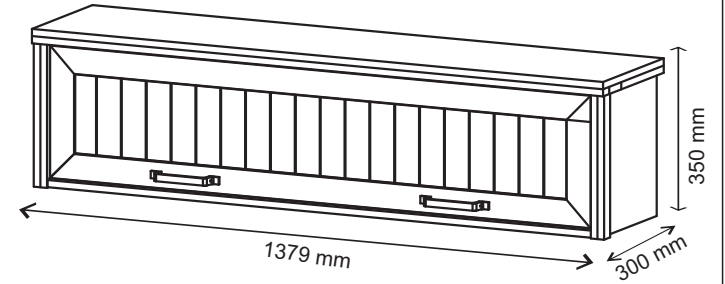
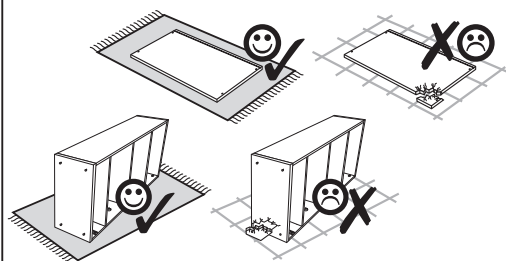
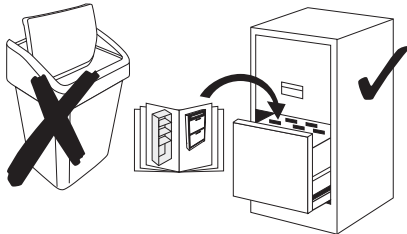


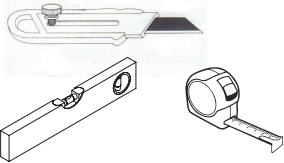






Instalation manual

Ράφι Τοίχου Verne



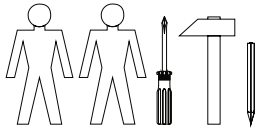


Element symbol	Dimensions			Code	Package
1	1379	300	1	WISZ_1D_vagonka.001	1/2
2	1313	290	1	WISZ_1D_vagonka.002	1/2
3	318	293	1	WISZ_1D_vagonka.005	1/2
4	318	293	1	WISZ_1D_vagonka.006	1/2
5	336	1331	1	WISZ_1D_vagonka.011	1/2
6	1307	295	1	WISZ_1D_vagonka.008	2/2


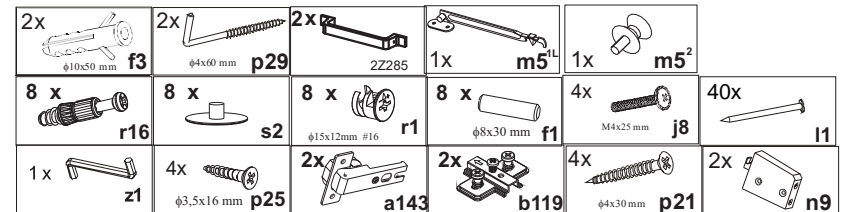


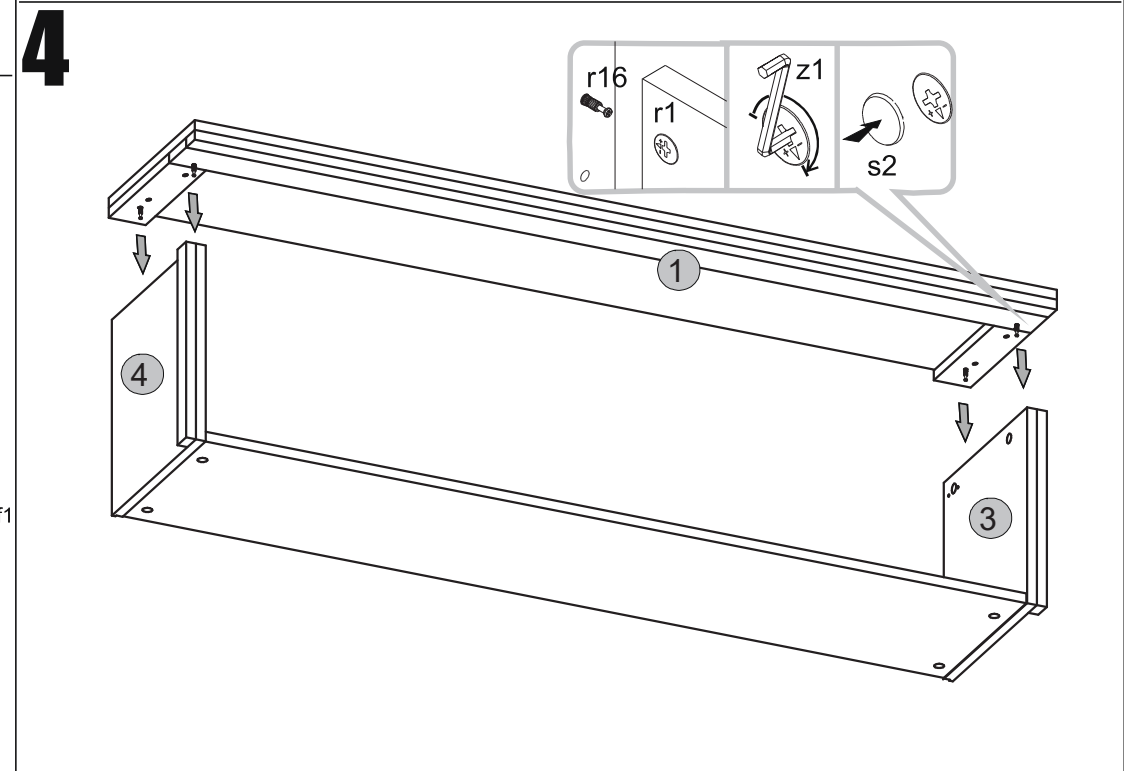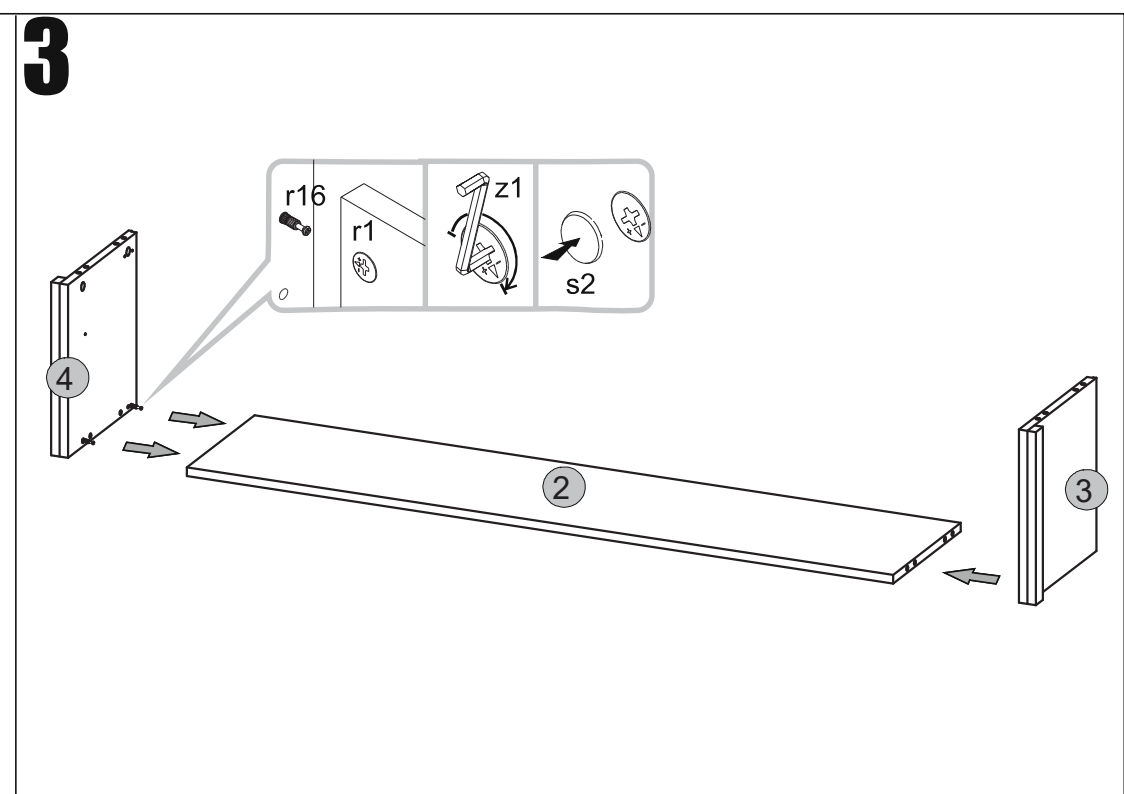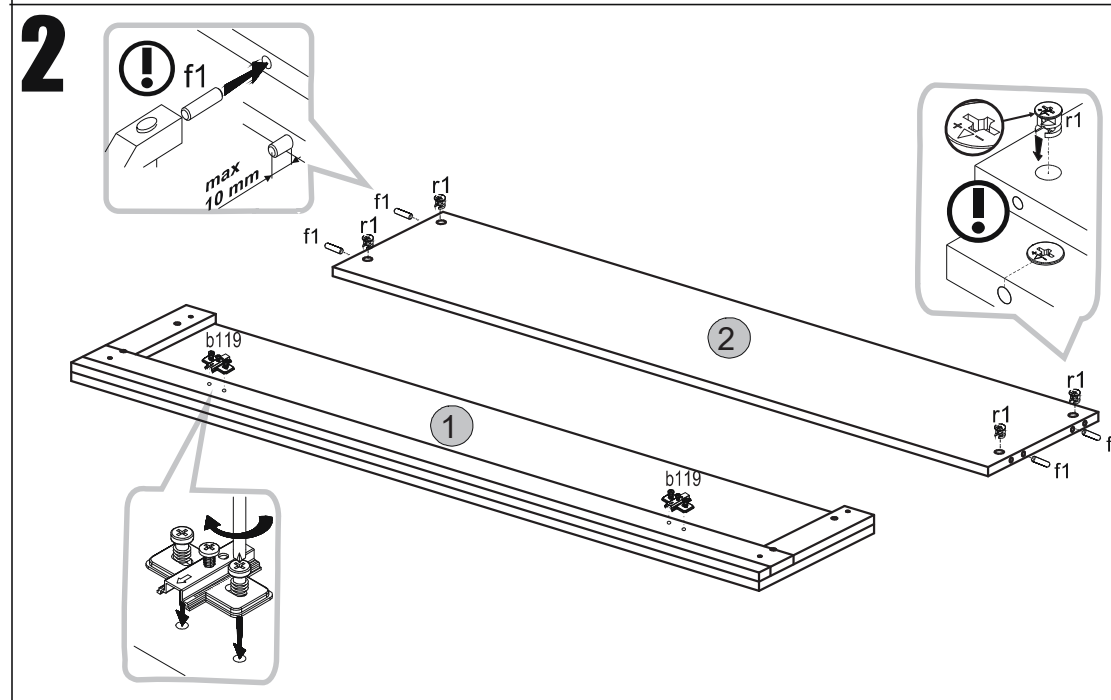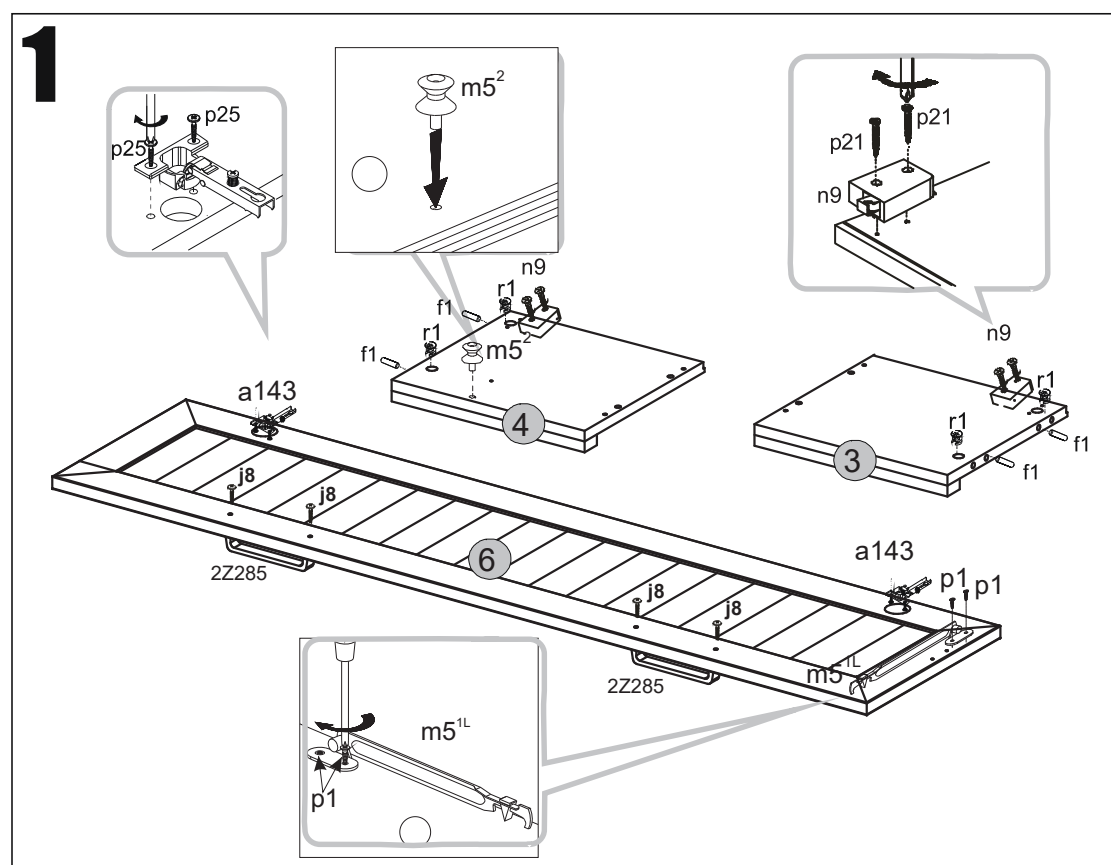

5

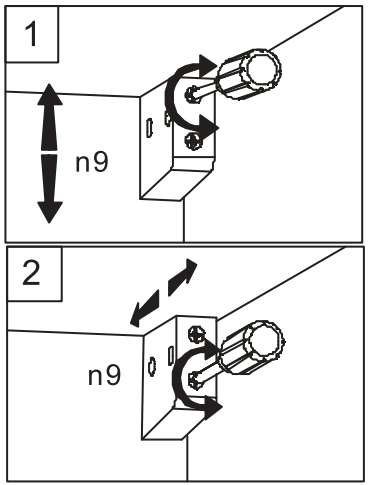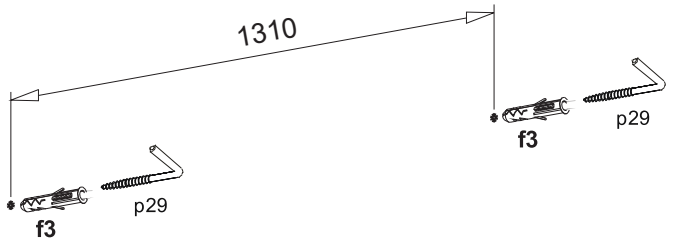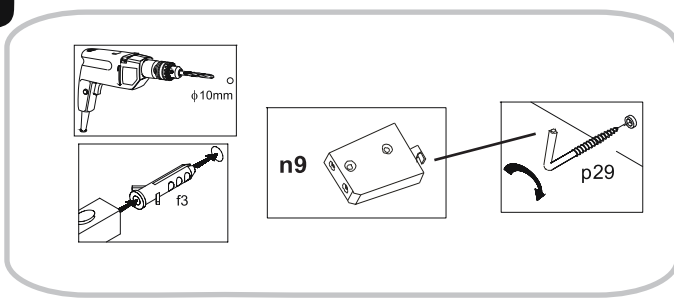

!
a=b

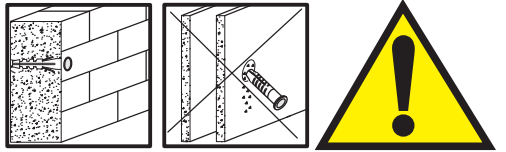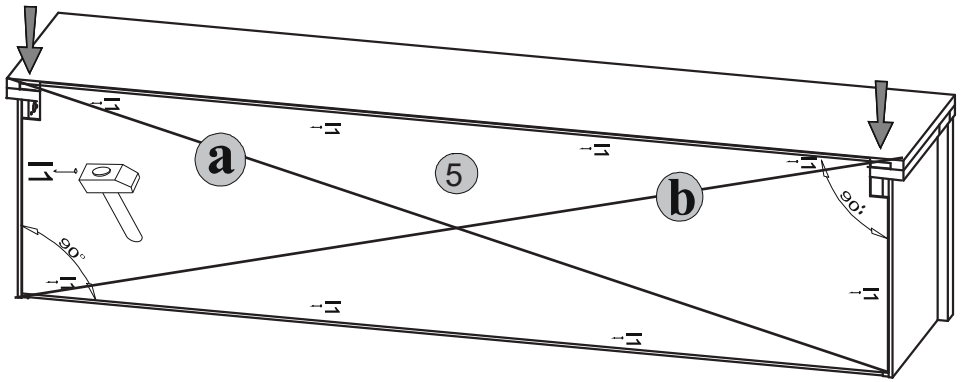

6

